


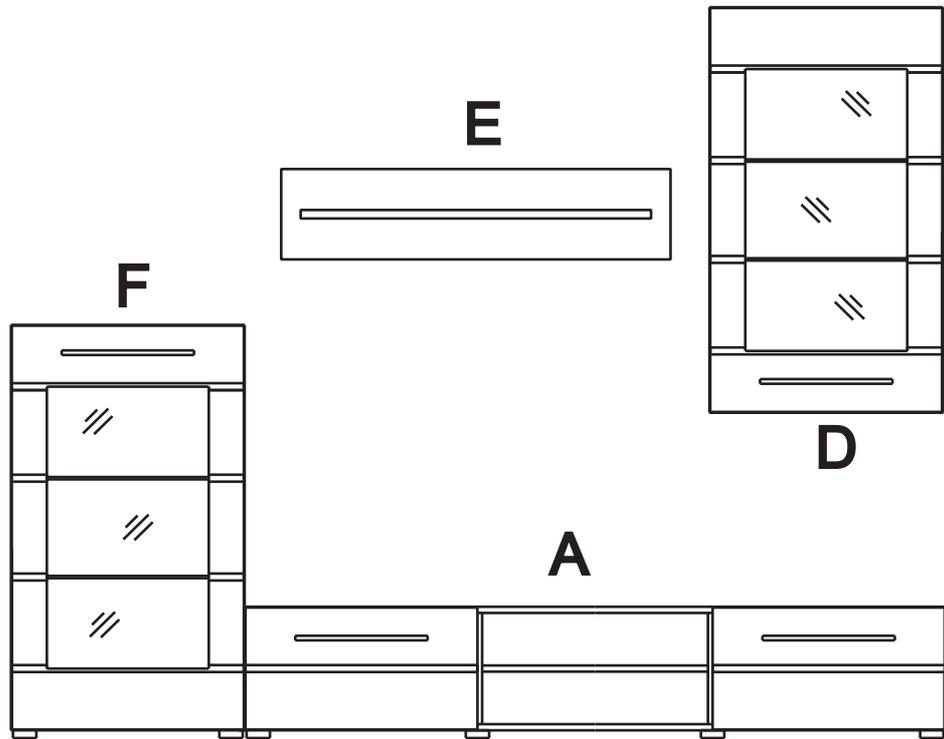






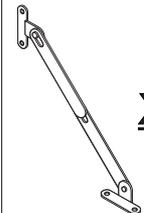


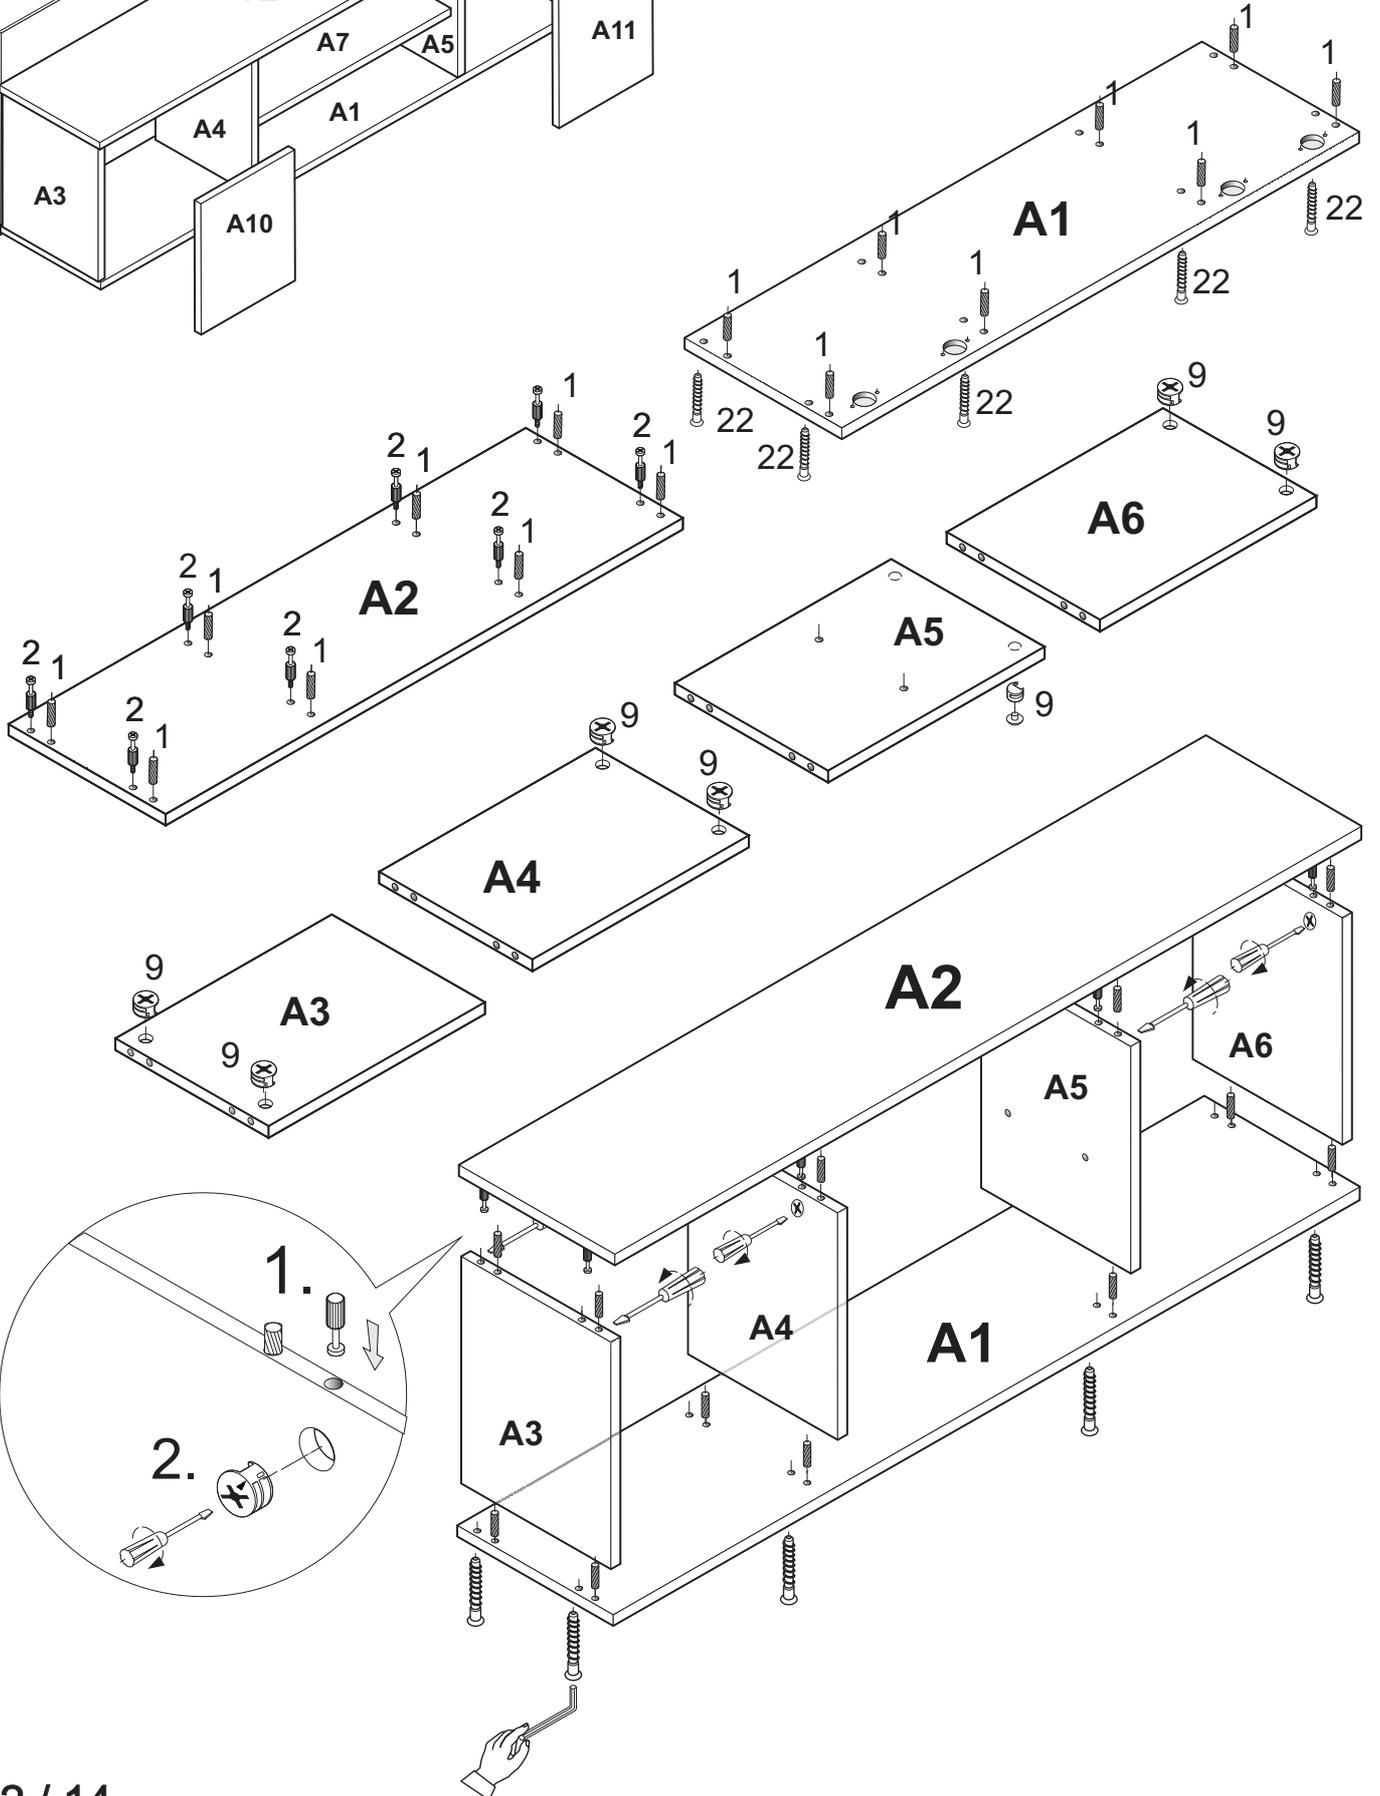
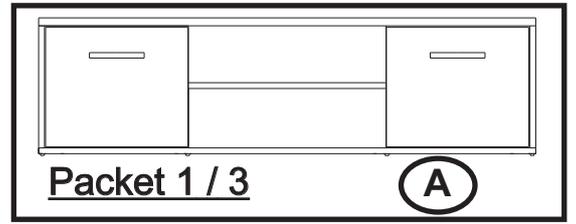
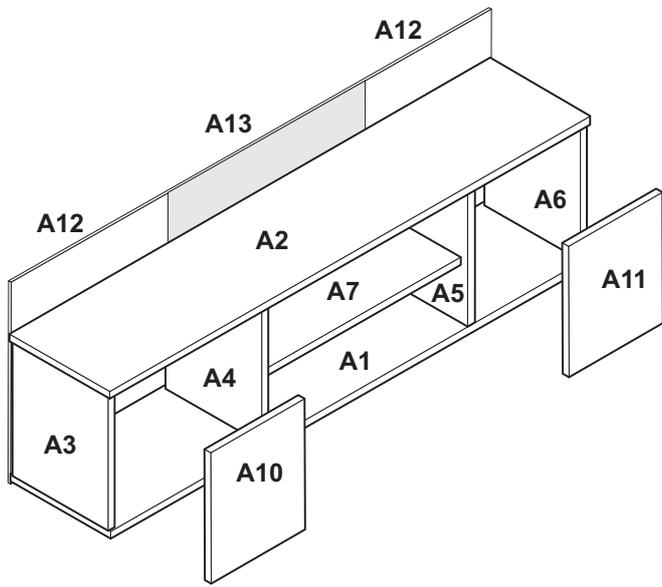
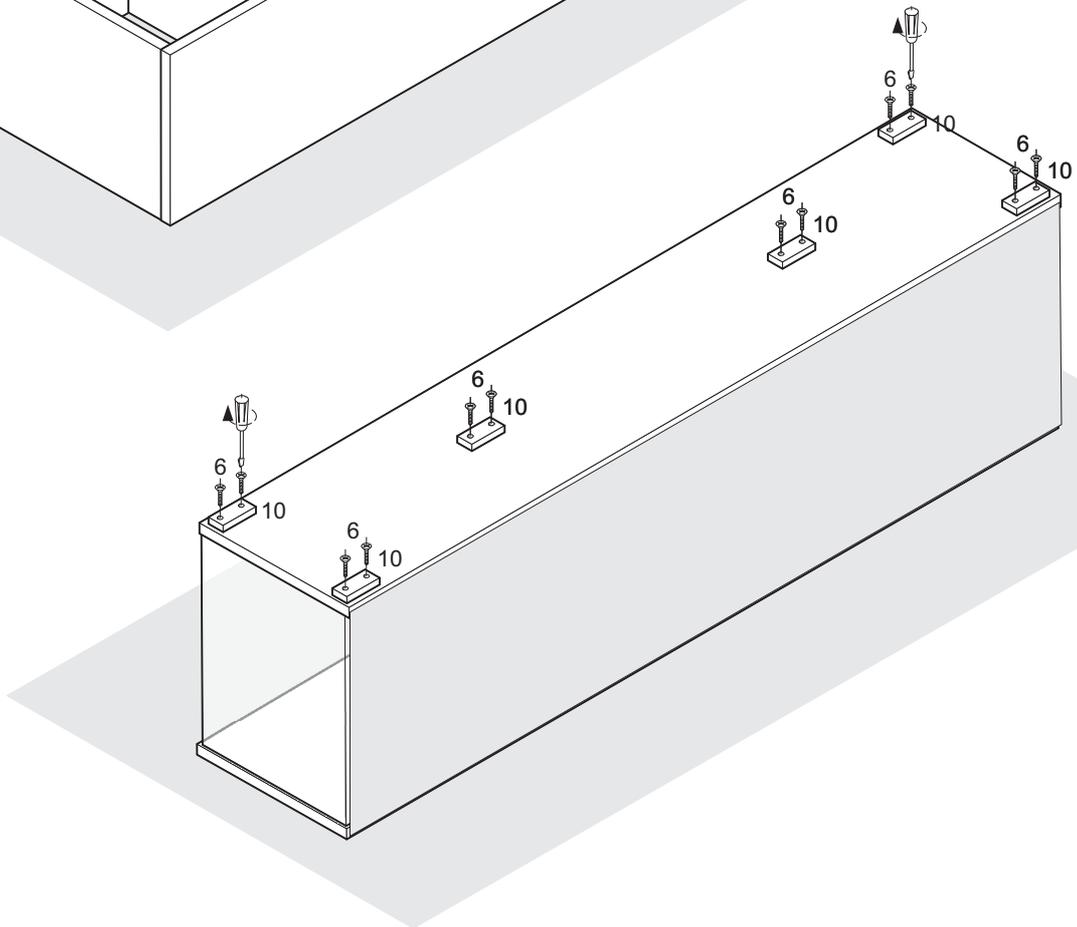
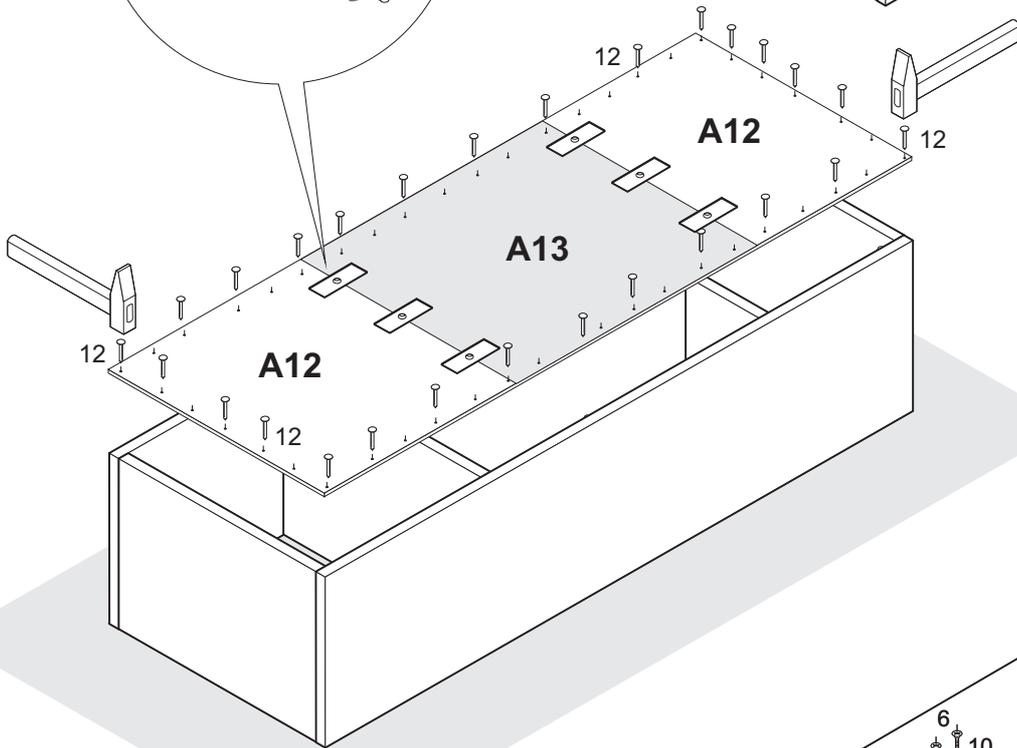





MONTAGEANLEITUNG ABW "PUMA 1"



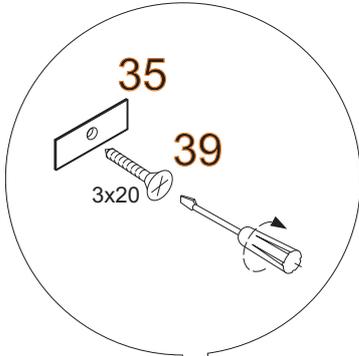








1	 8x35	<u>X 32</u>	29		<u>X 4</u>	12	 X 105	17		<u>X 1</u>	
2		<u>X 20</u>	14		<u>X 16</u>	38		<u>X 8</u>	18		<u>X 1</u>
3		<u>X 4</u>	19		<u>X 2</u>	7		<u>X 2</u>	21	 3.5x30	<u>X 4</u>
4	 4x30	<u>X 12</u>	9		<u>X 20</u>			30	LED LIGHTS	<u>X 1</u>	
5		<u>X 4</u>	10		<u>X 10</u>	22	 7x50	<u>X 16</u>	39	 3x20	<u>X 30</u>
6	 5x11	<u>X 44</u>	26		<u>X 1</u>	40		<u>X 16</u>	13		<u>X 4</u>
35		<u>X 6</u>									

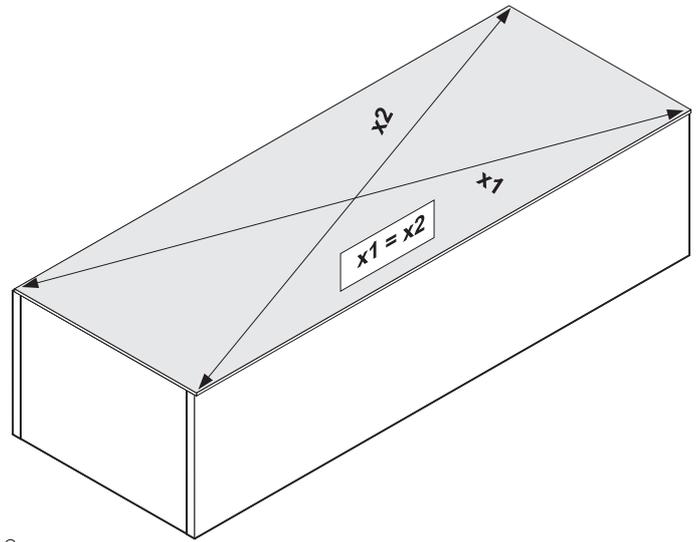


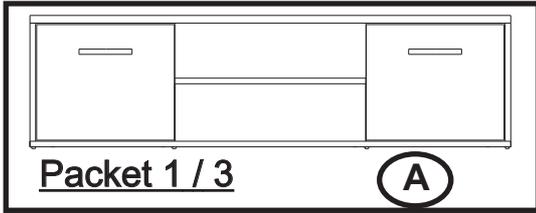

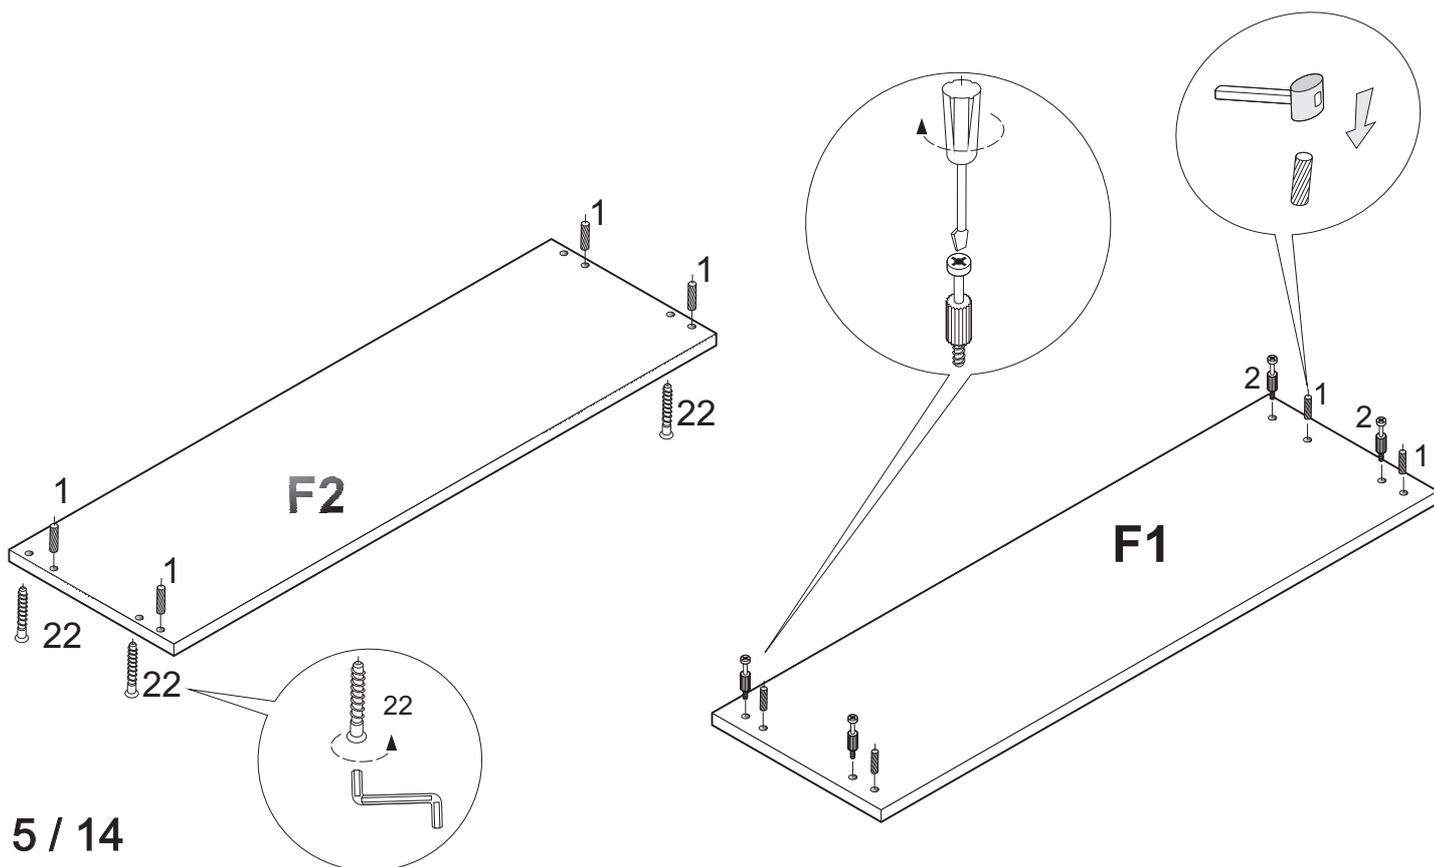
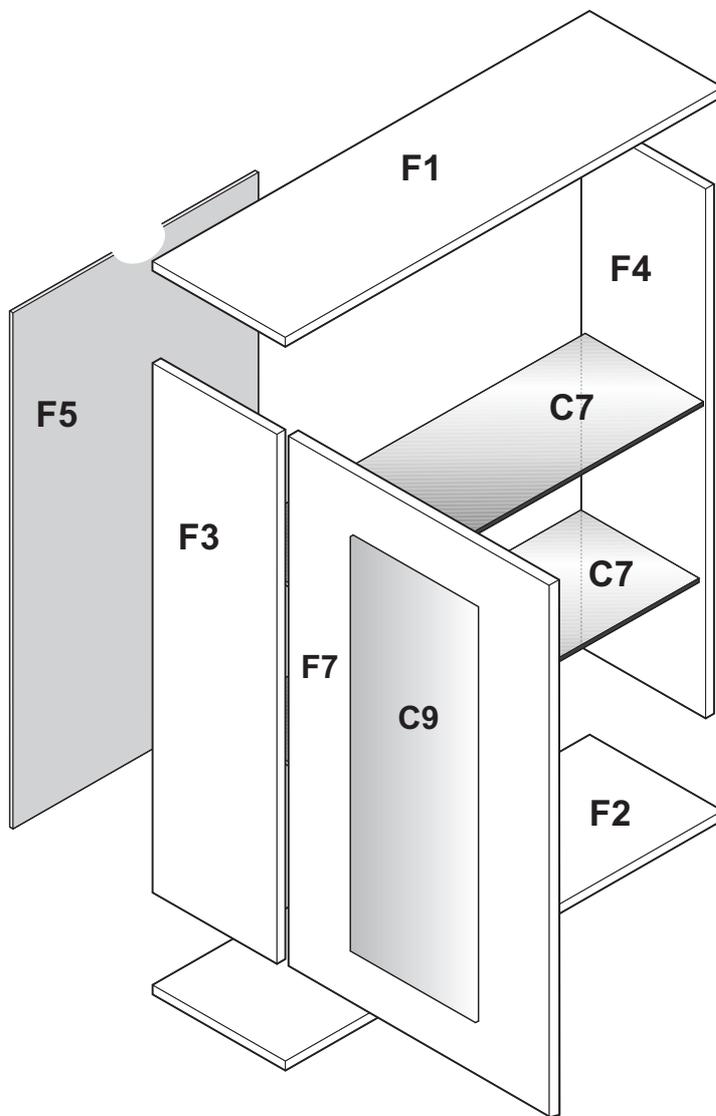
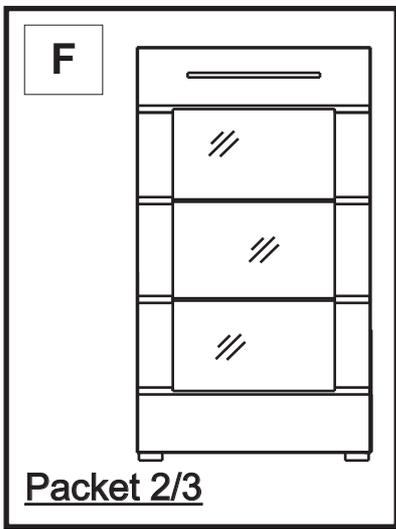


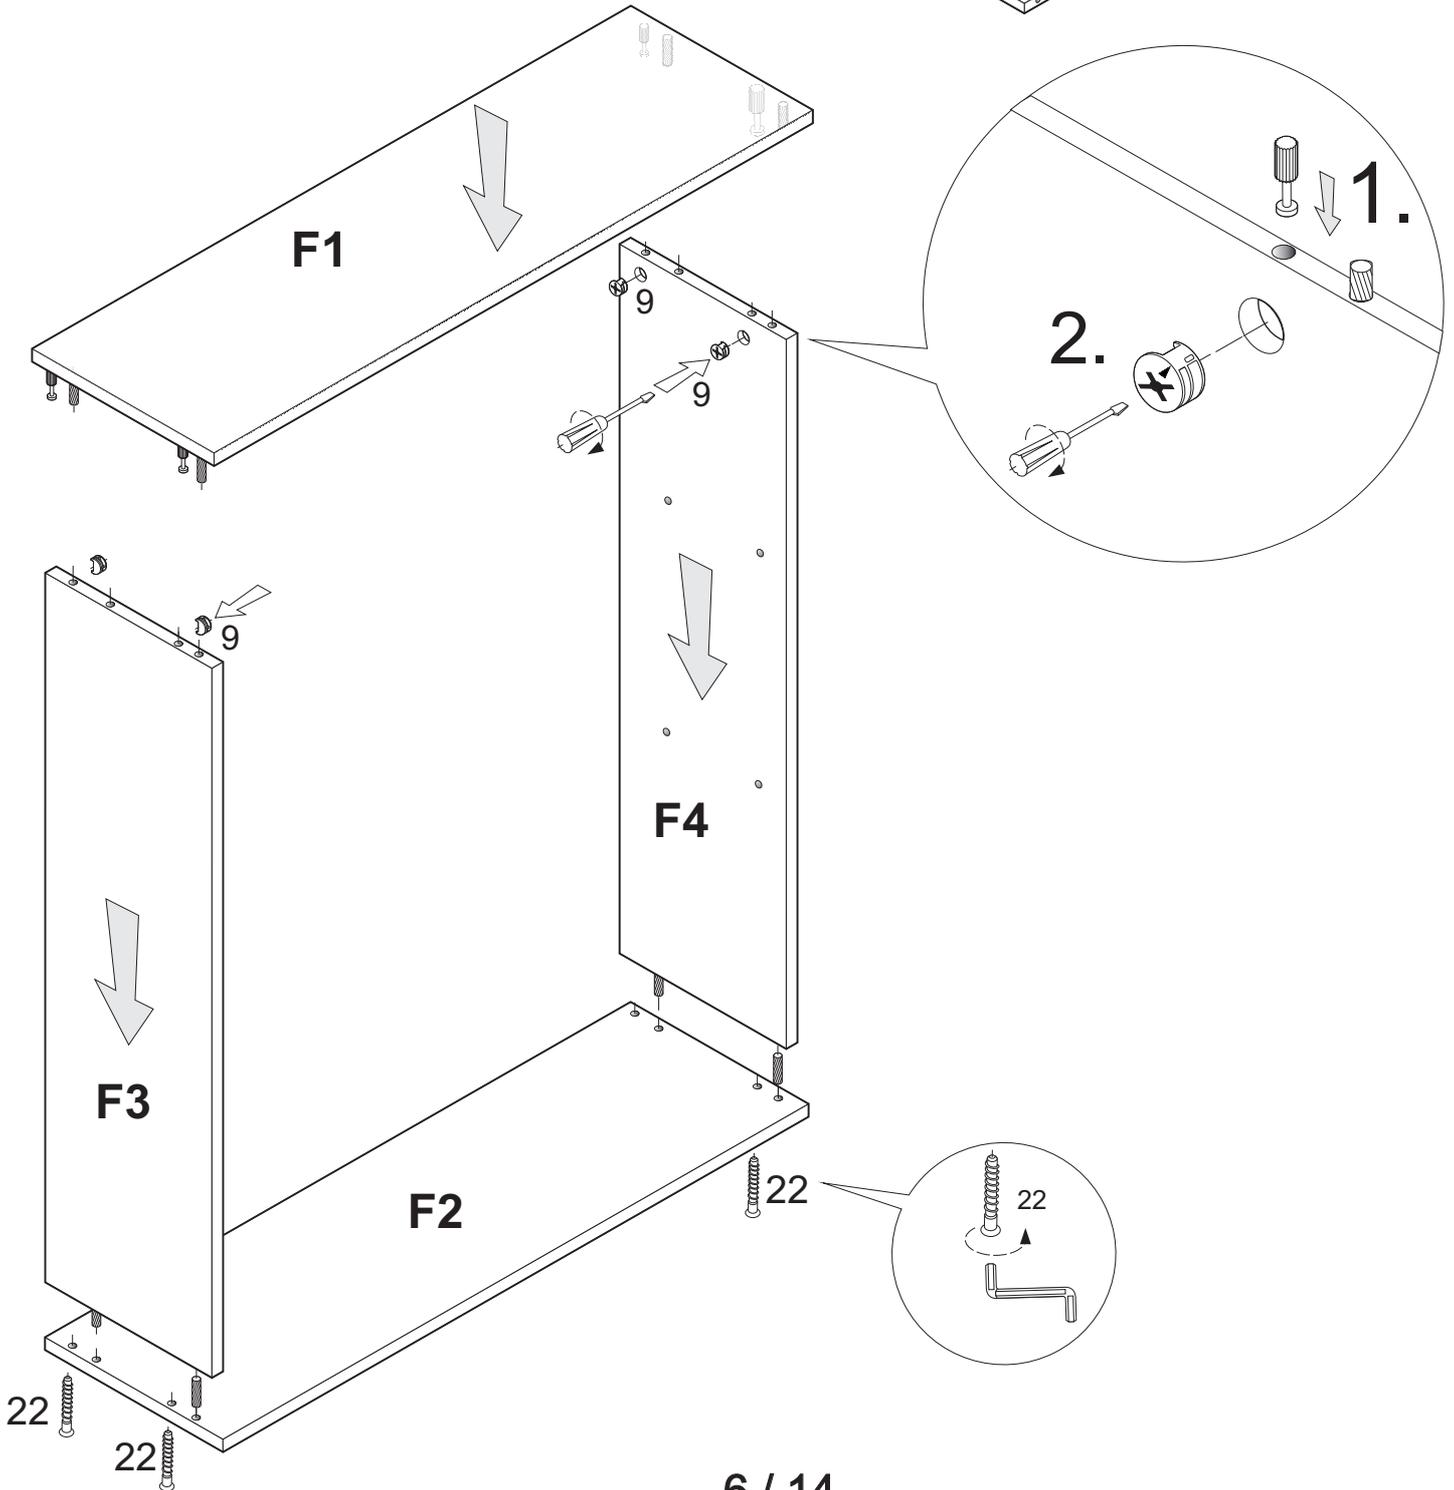
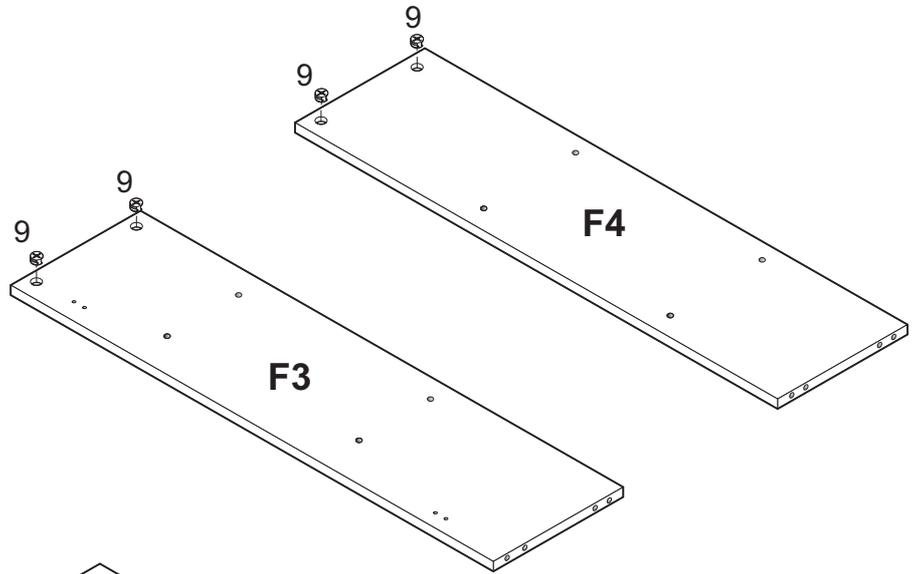
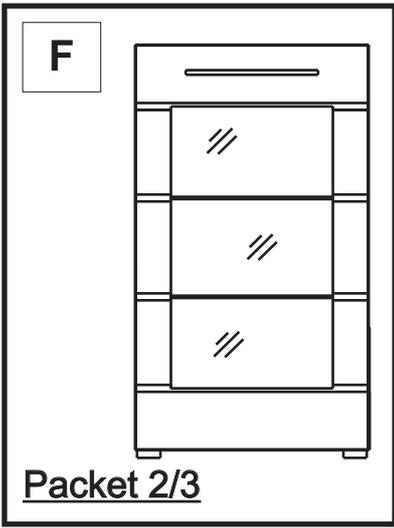


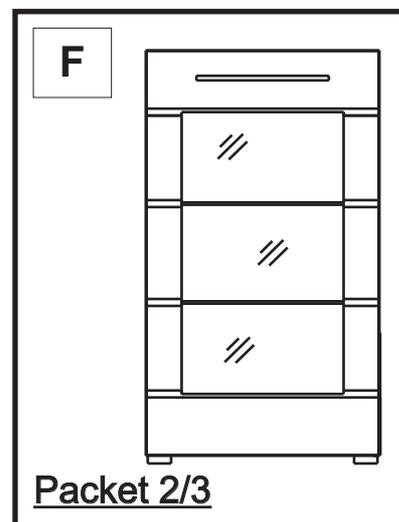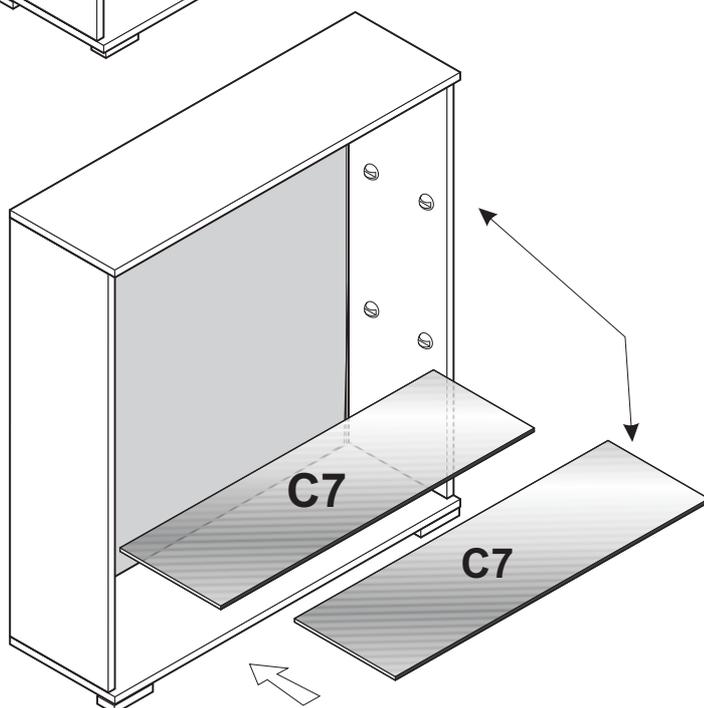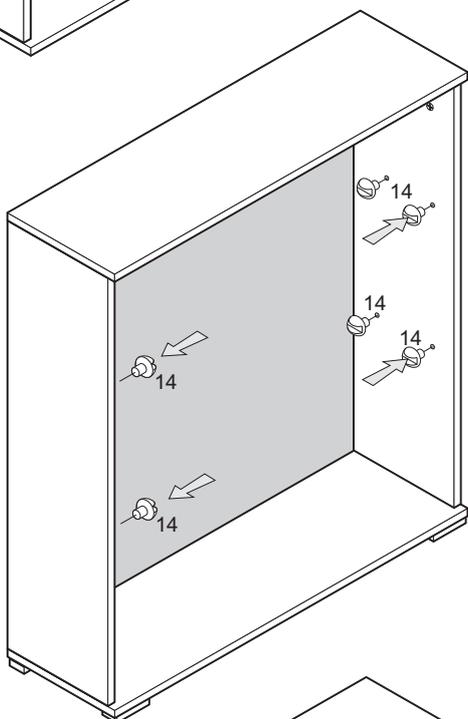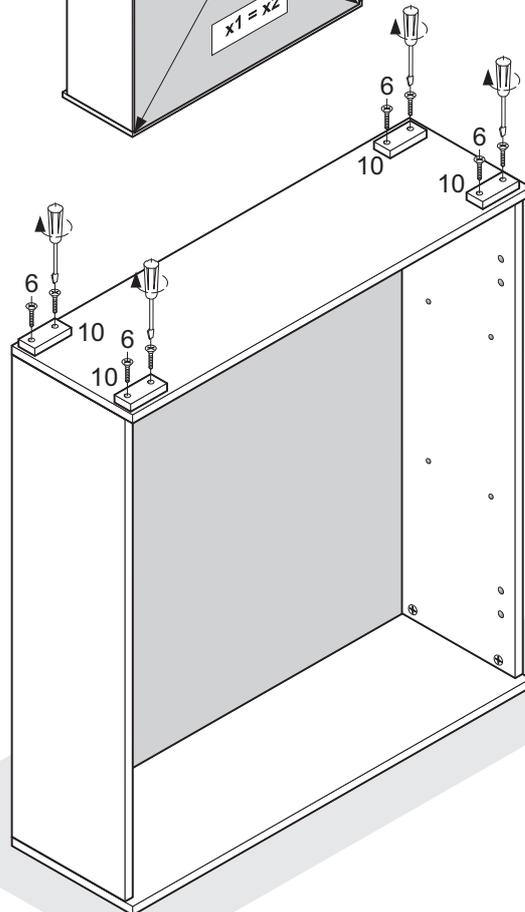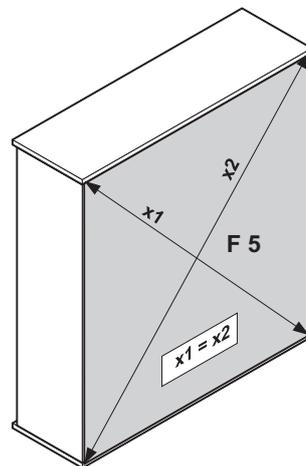
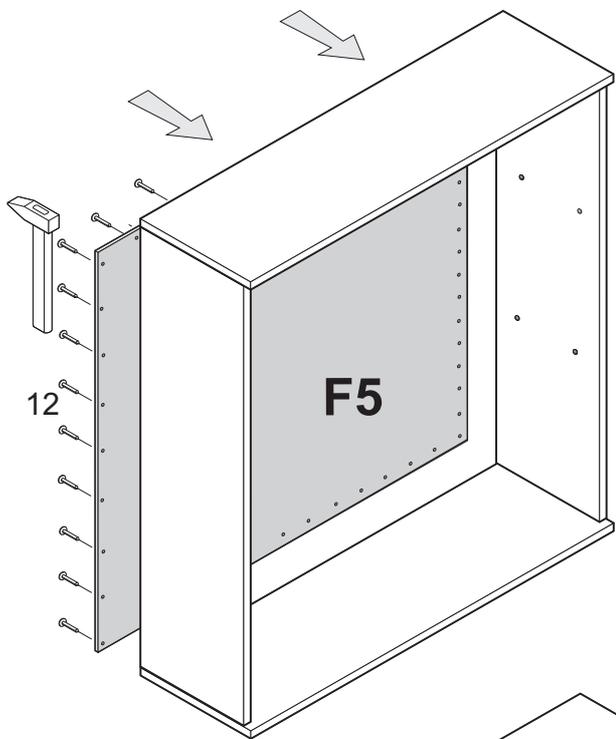




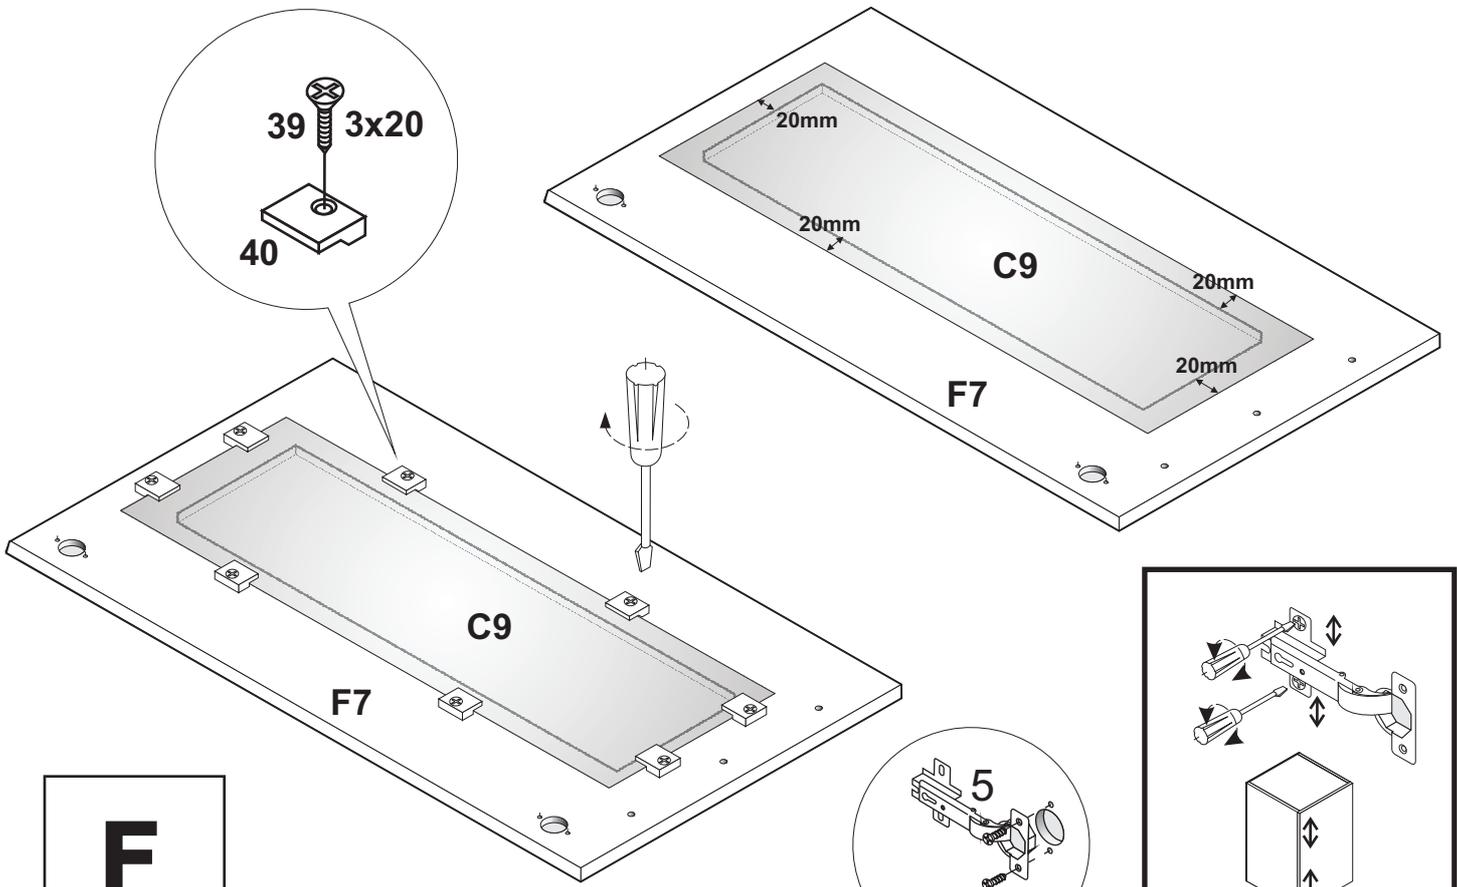



F

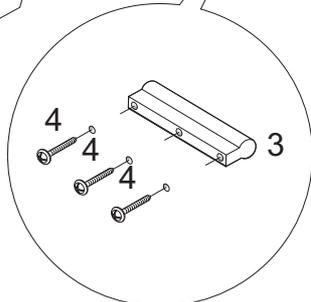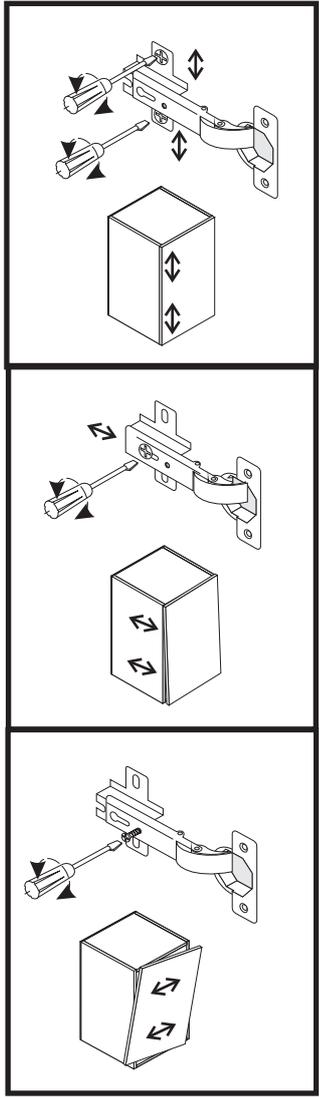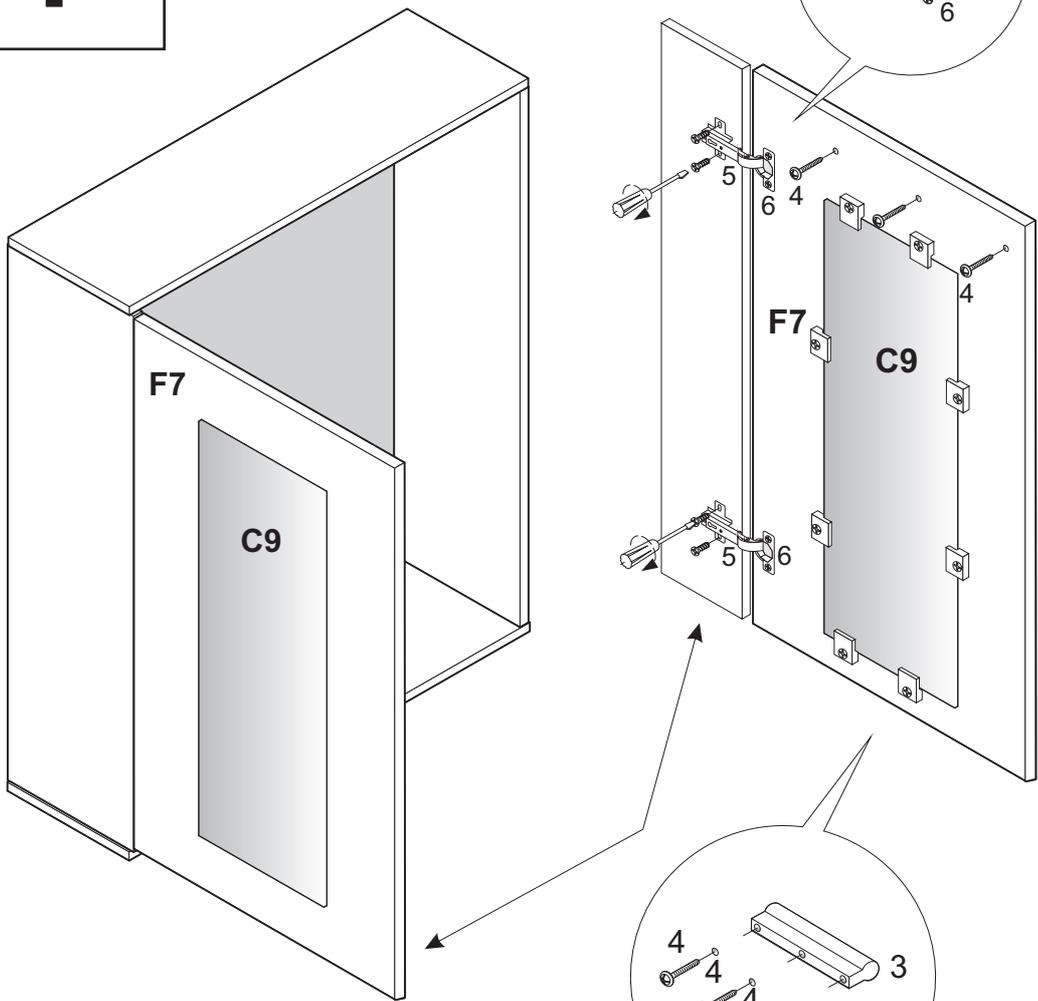


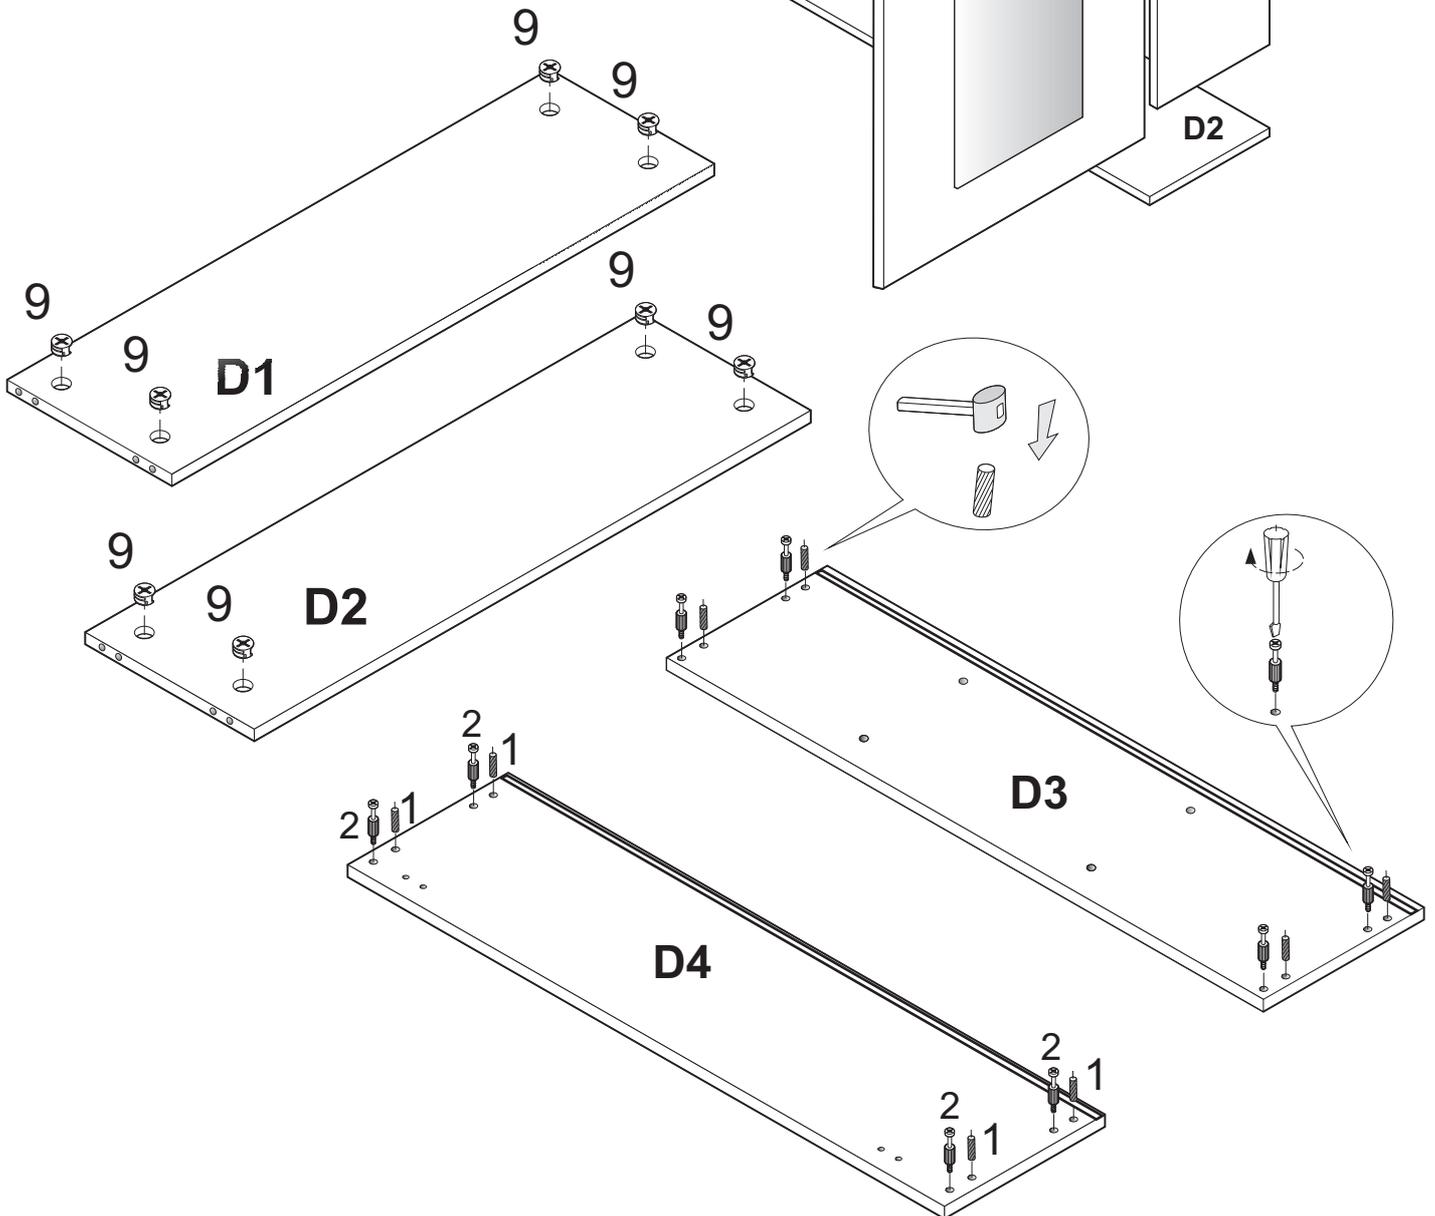
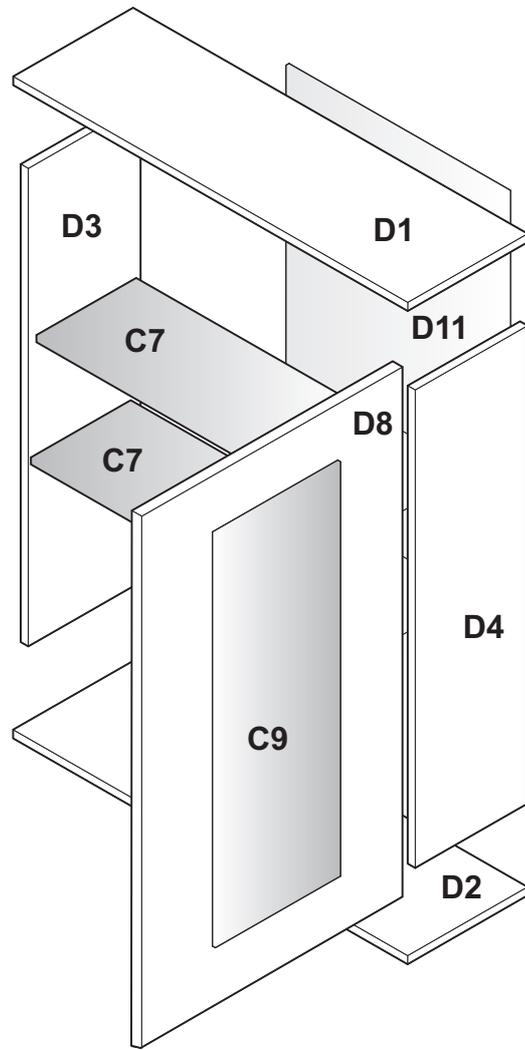
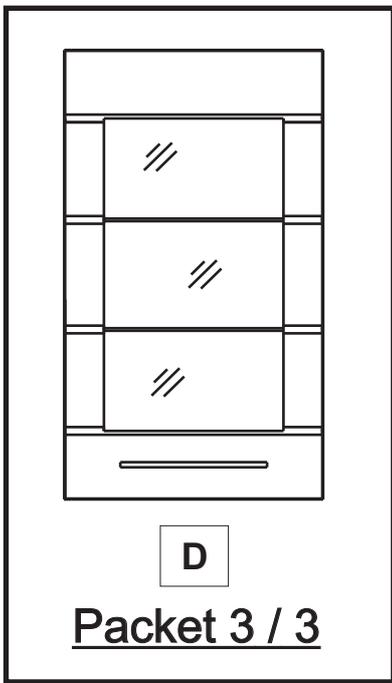



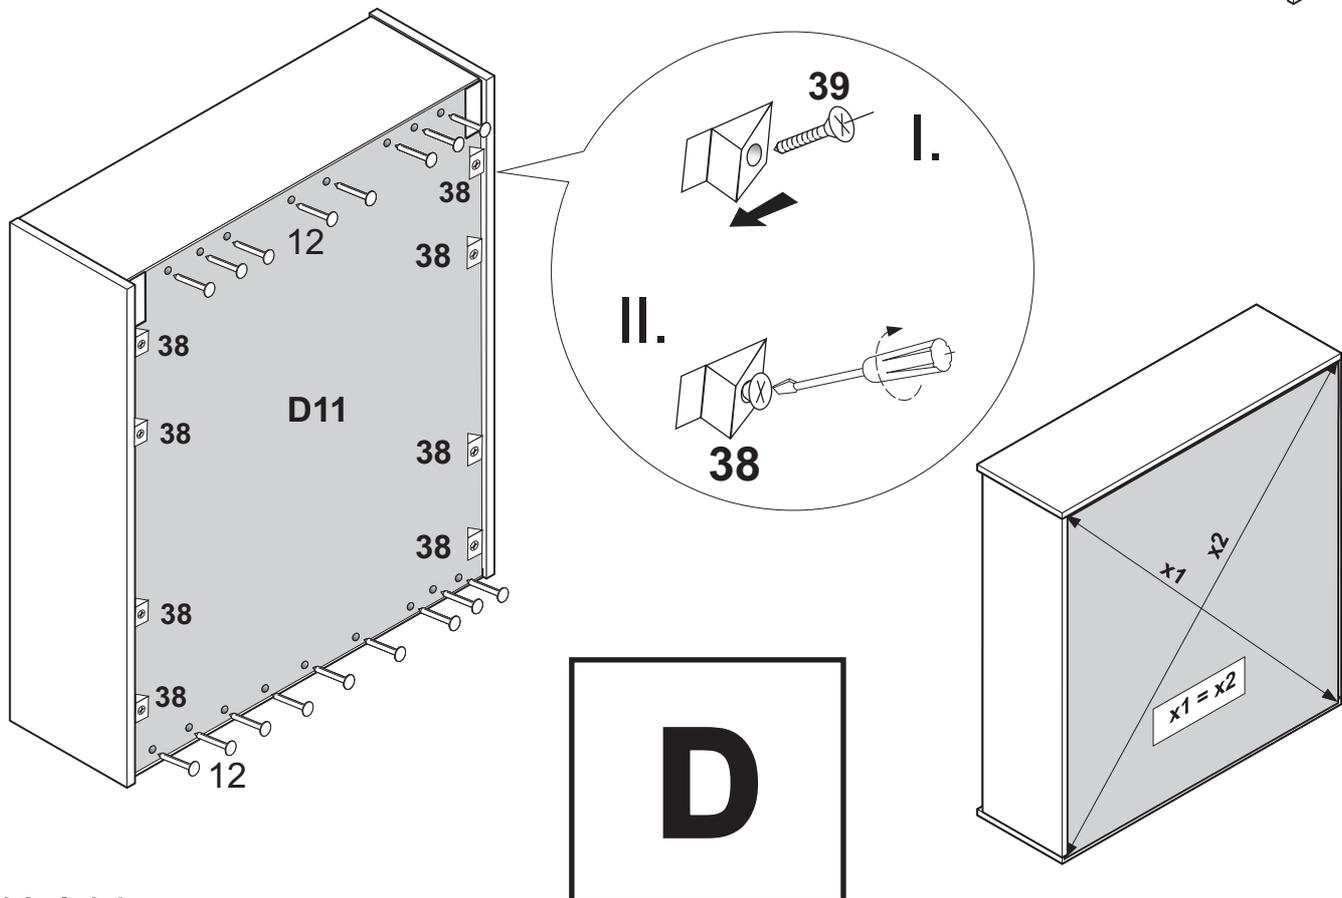
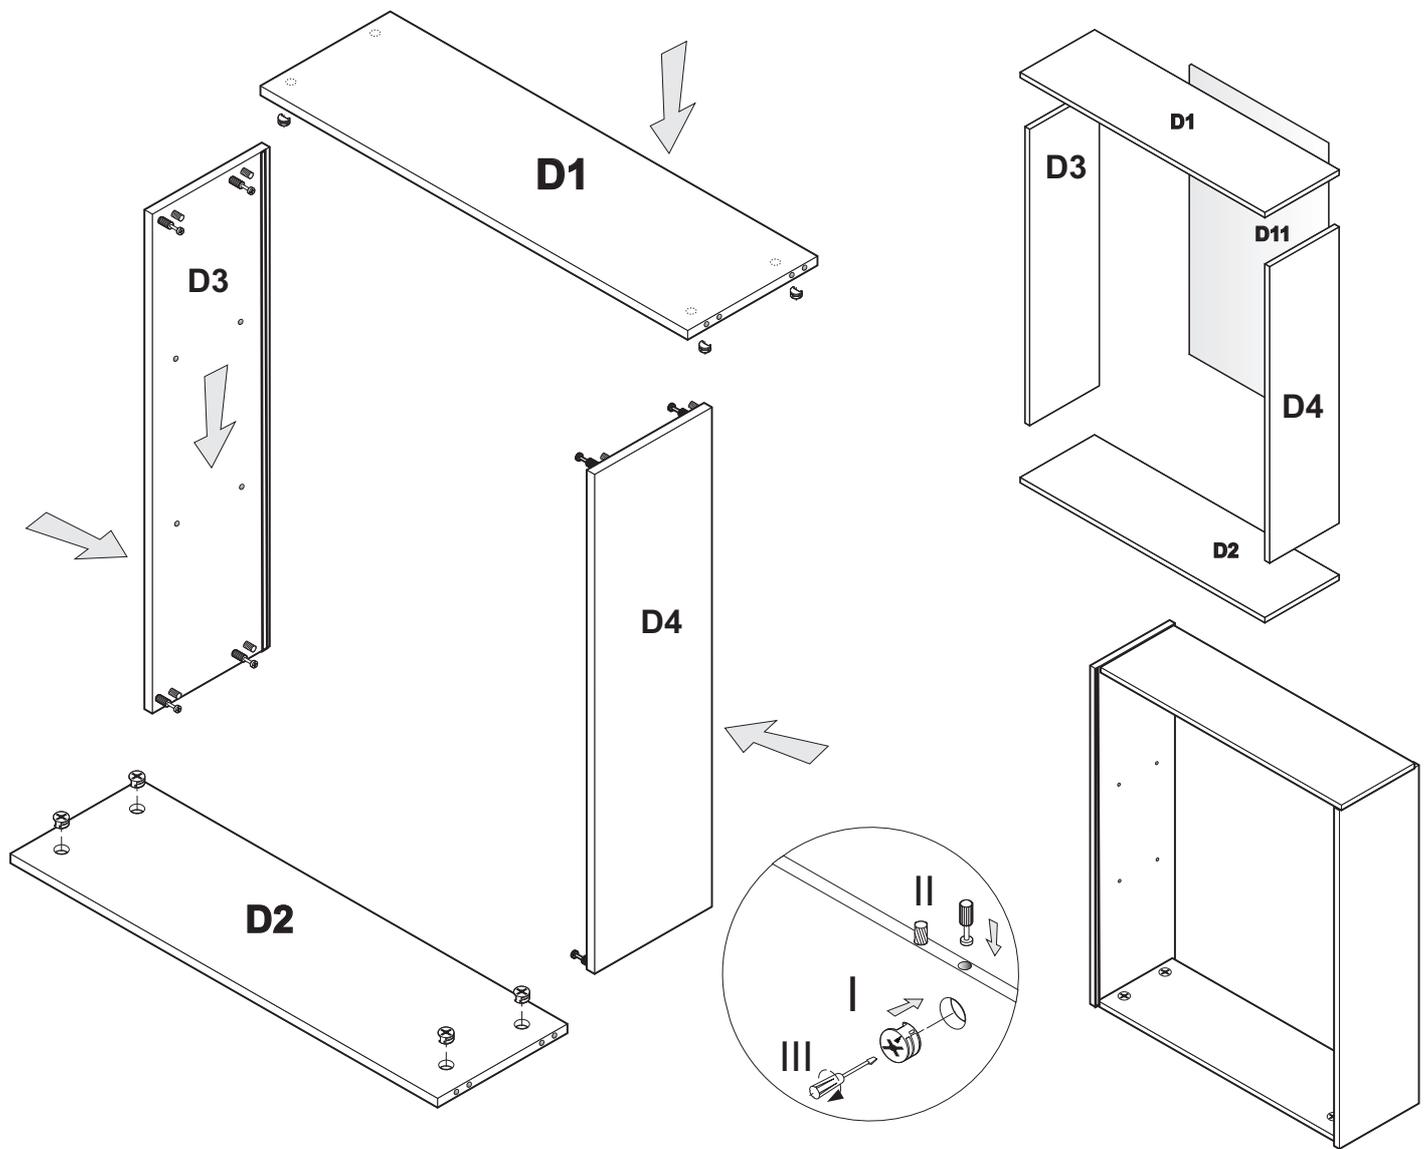


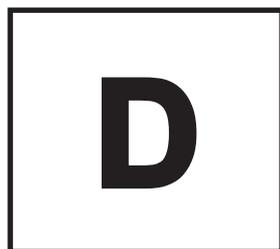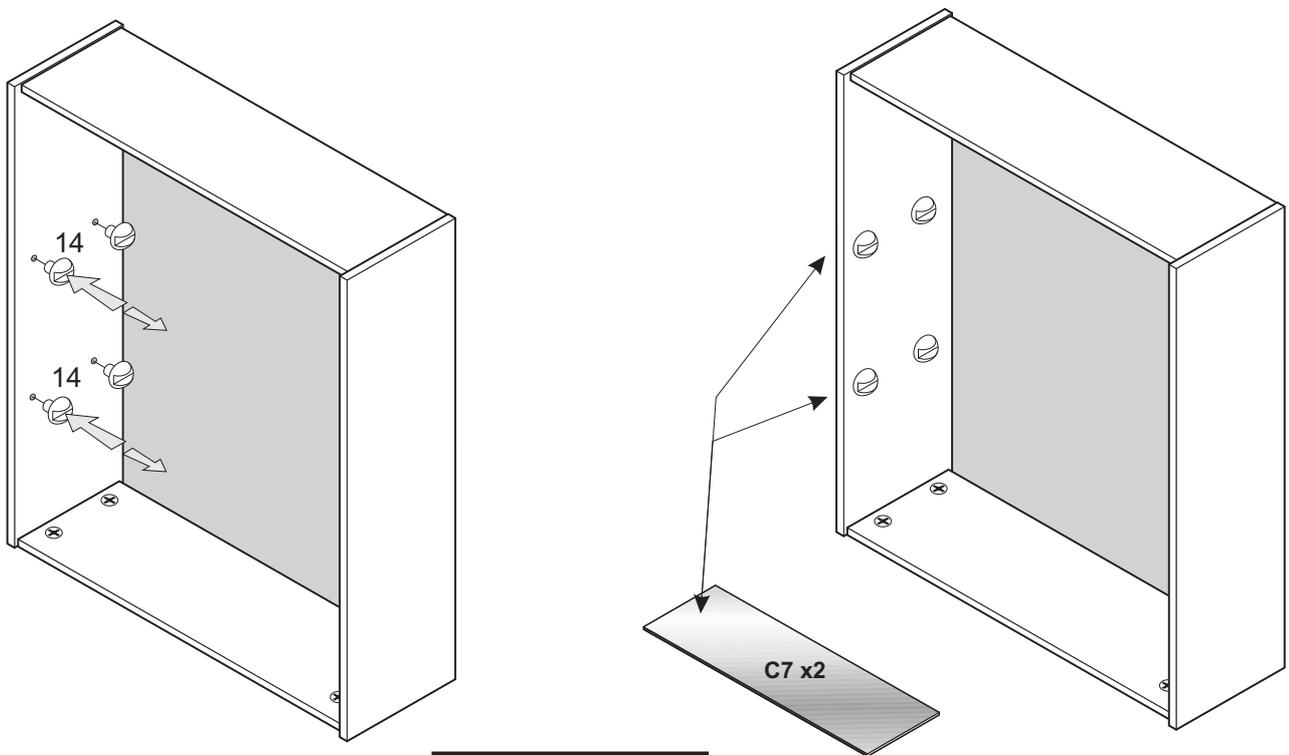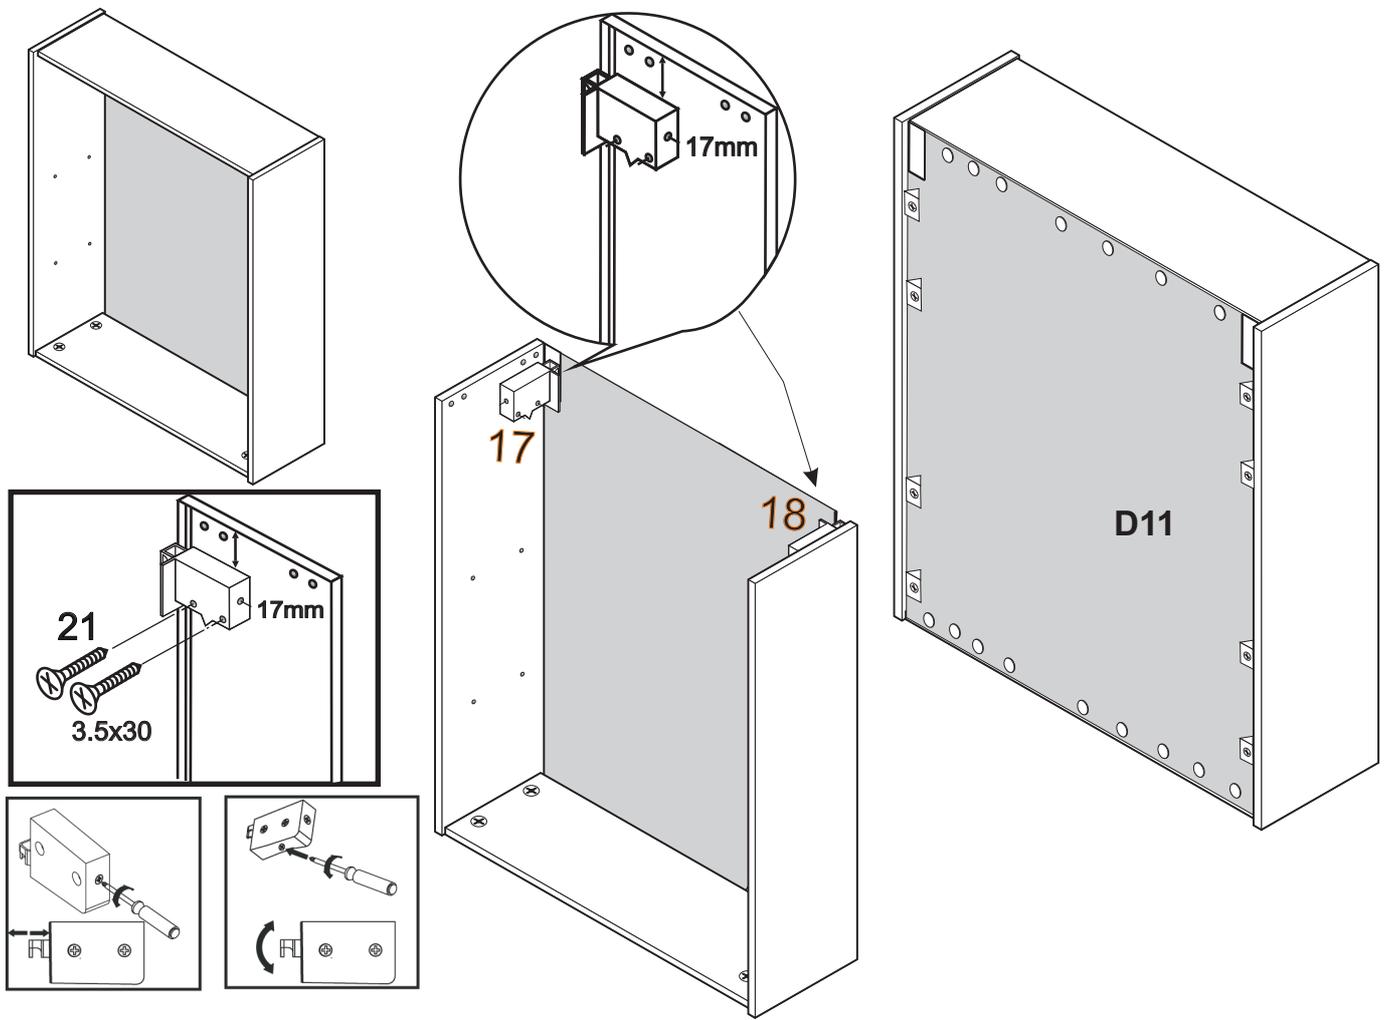

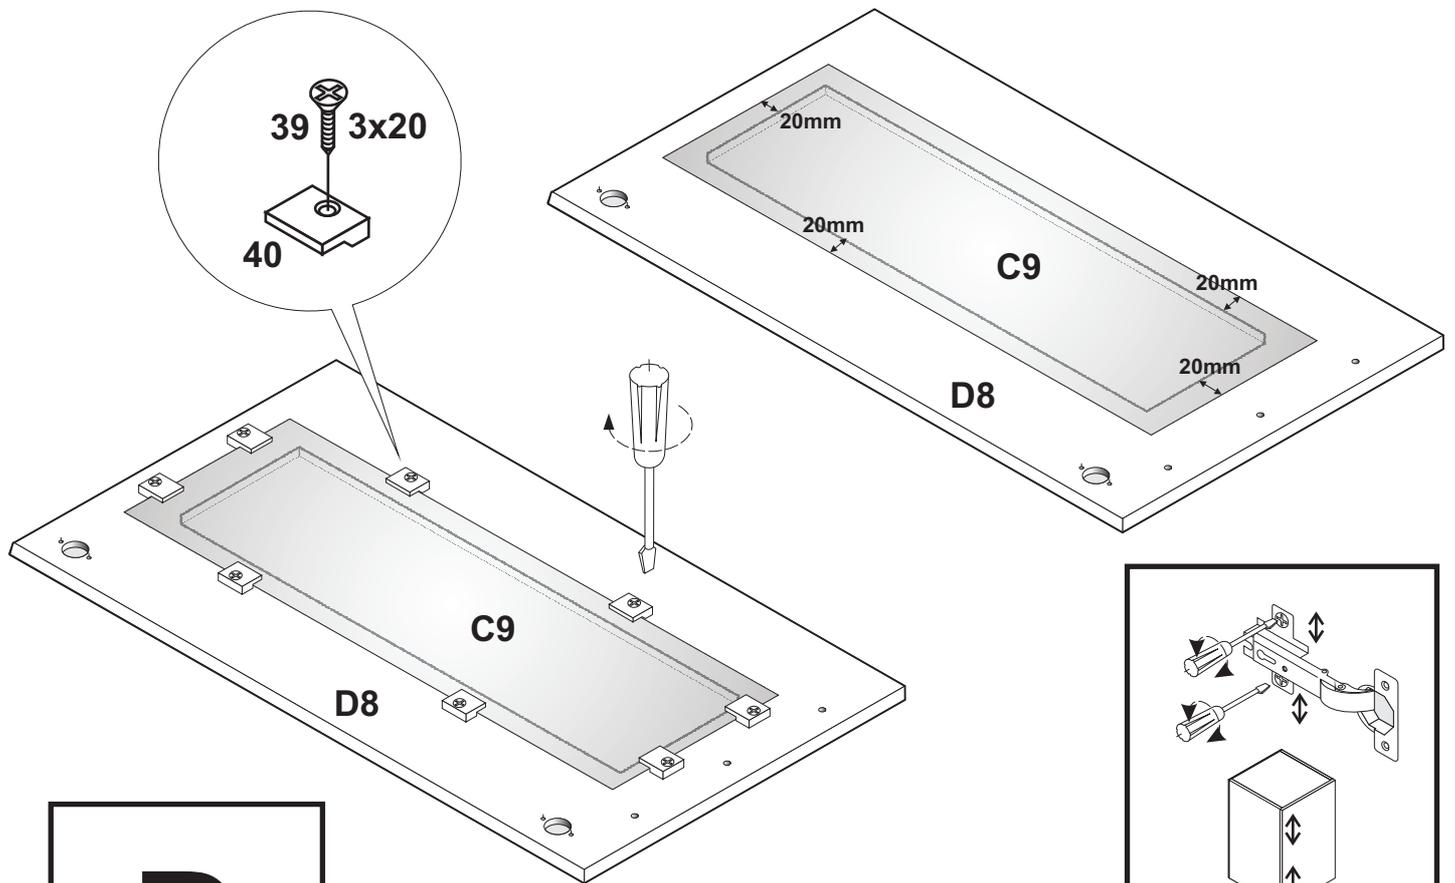






D

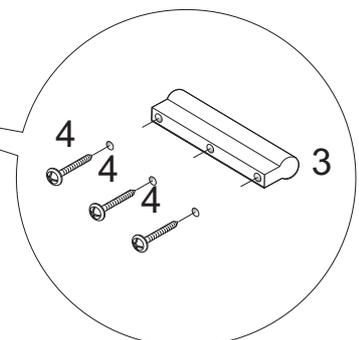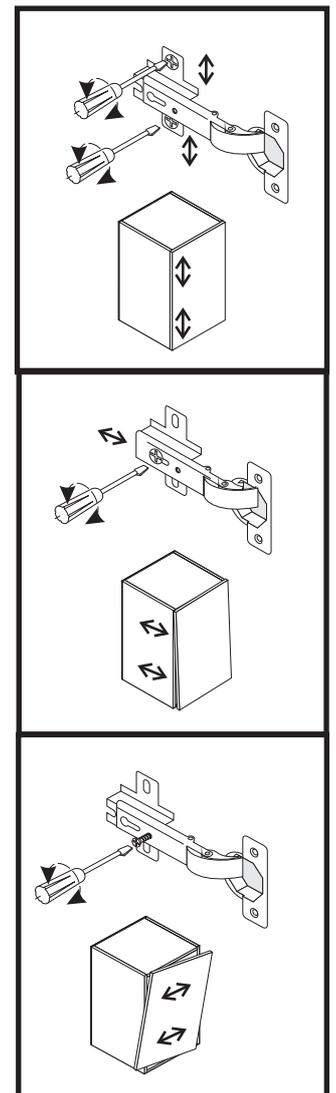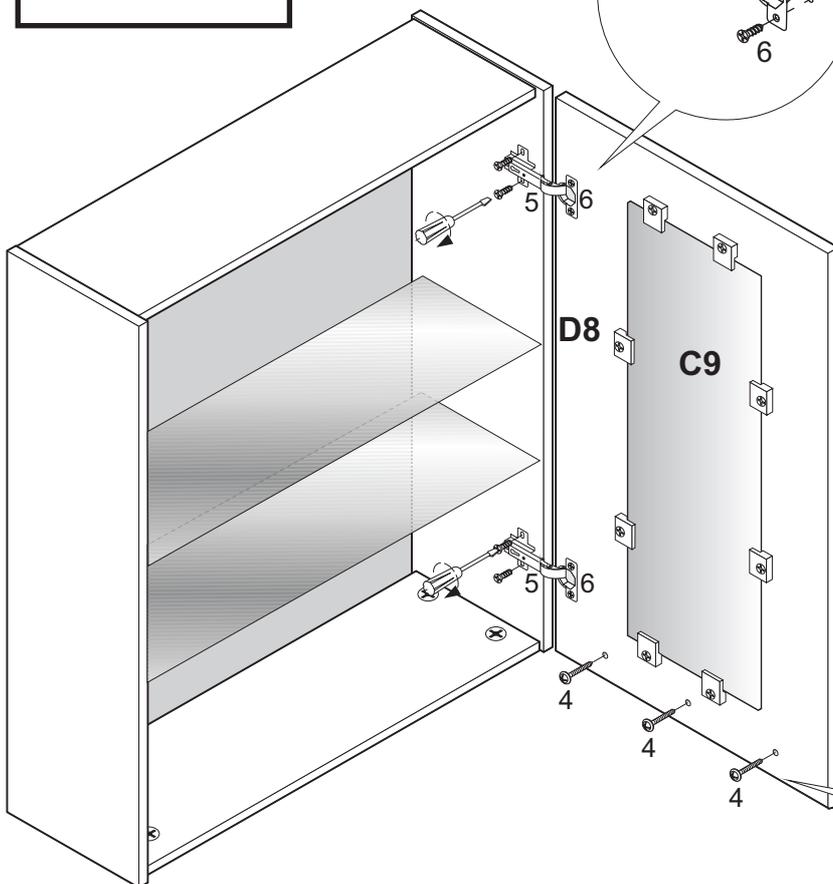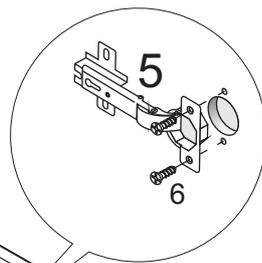

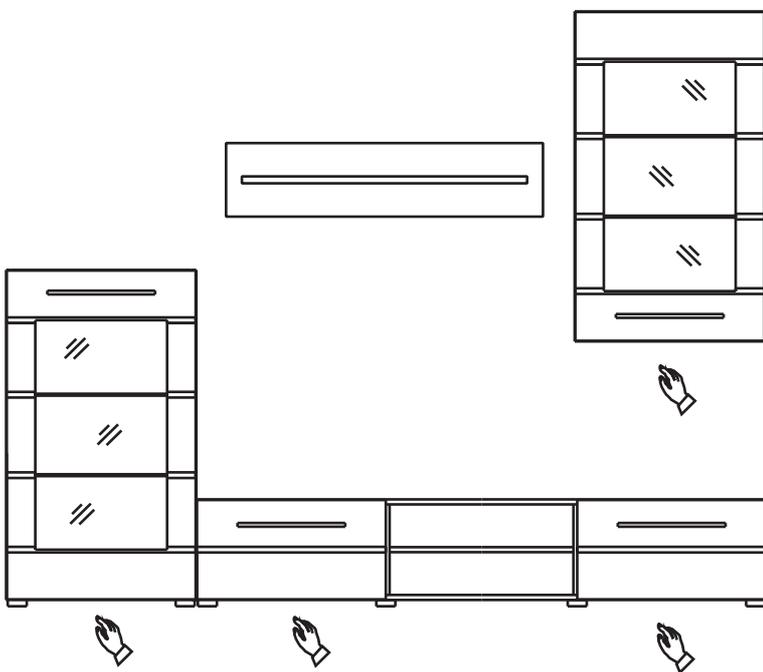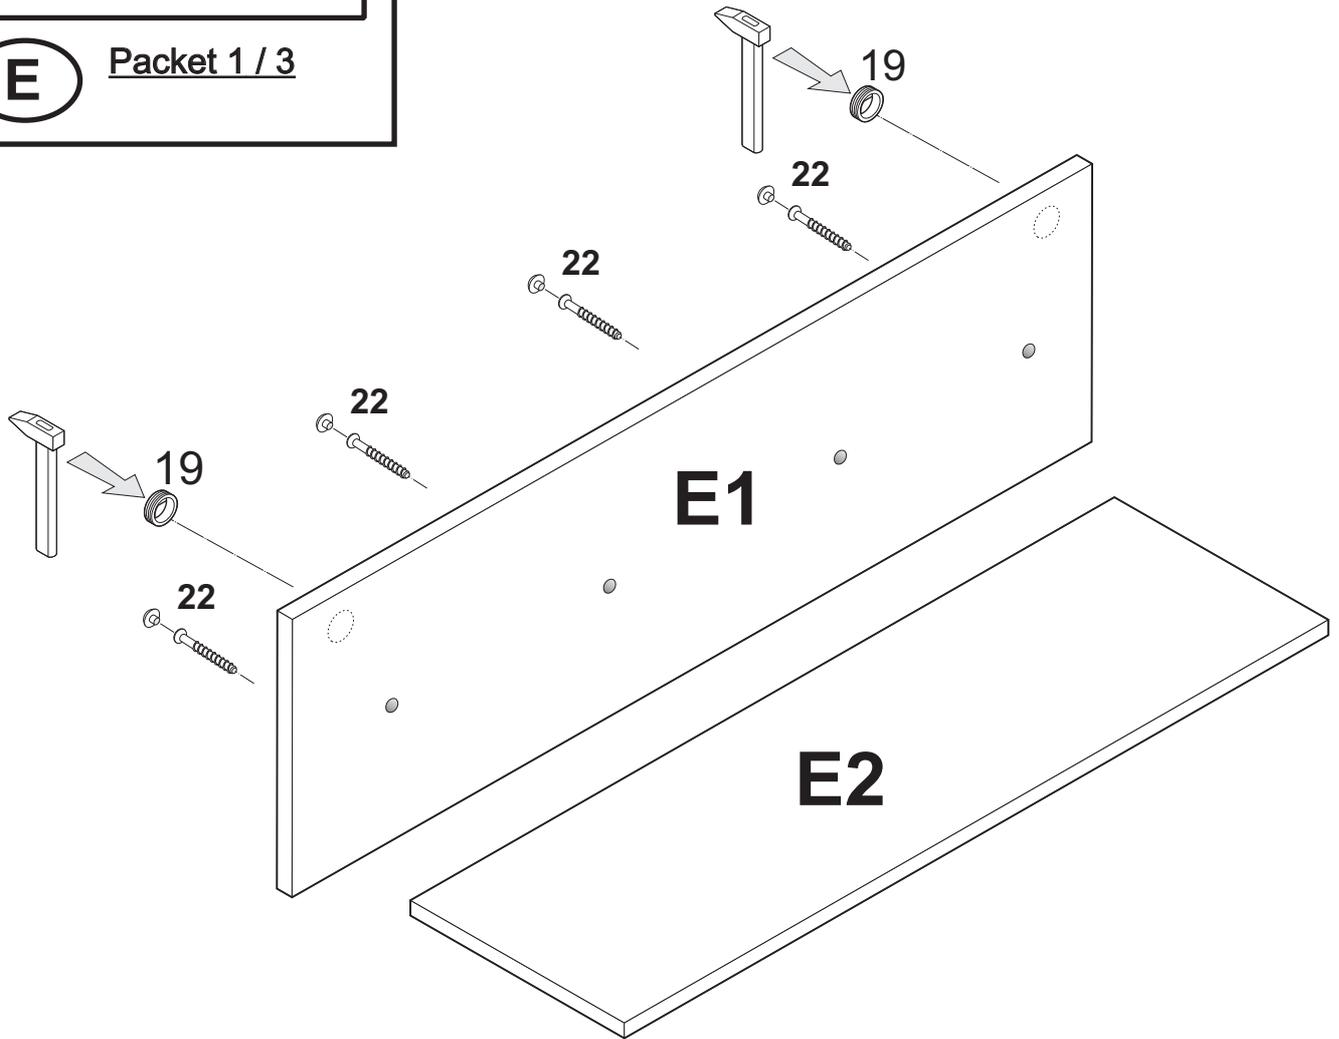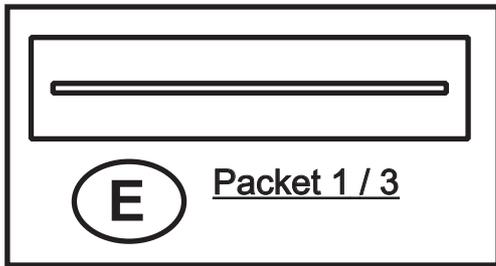






ACHTUNG!
 SCHUTZFOLIE AUF
 DIE FRONTEN. BITTE
 VORSICHTIG ABZIEHEN
 UND 14 TAGE
 DIE FRONTEN
 NICHT PUTZEN, DA DIE
 OBERFLACHE ABHARTEN
 MUSS. SONST WIRD
 DIE FRONT ZERKRATZT!

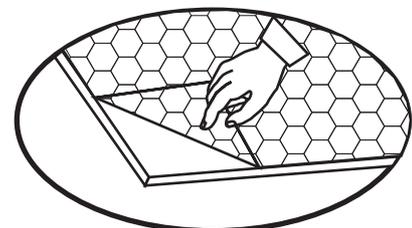


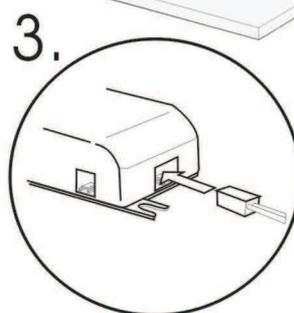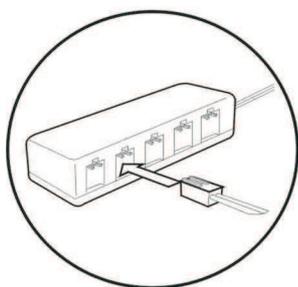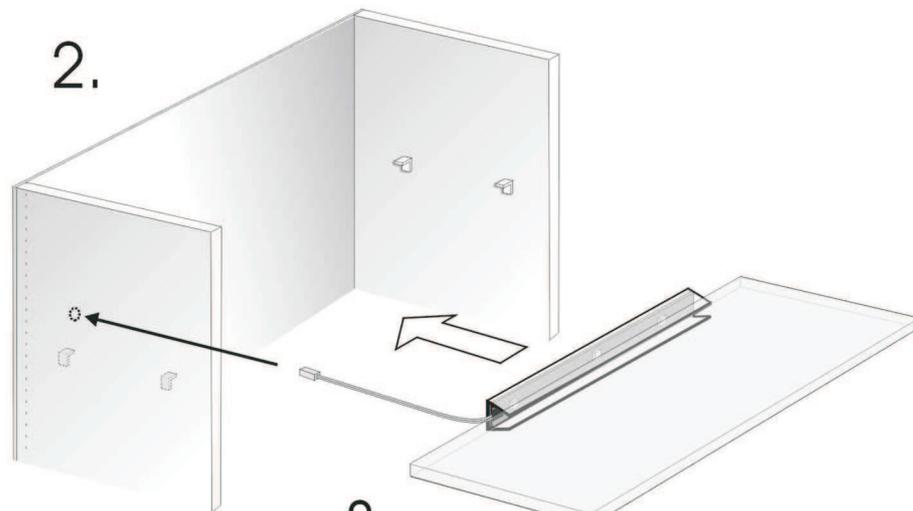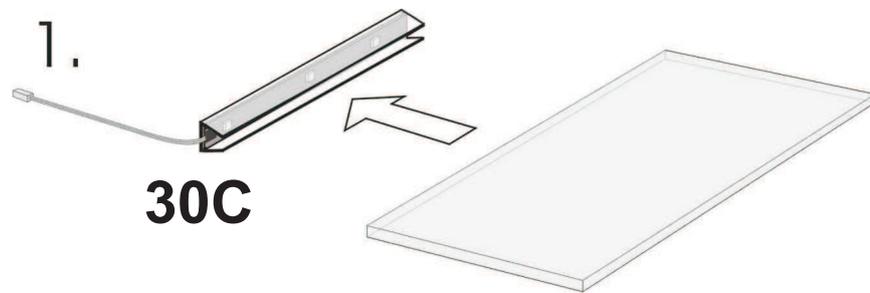

4.

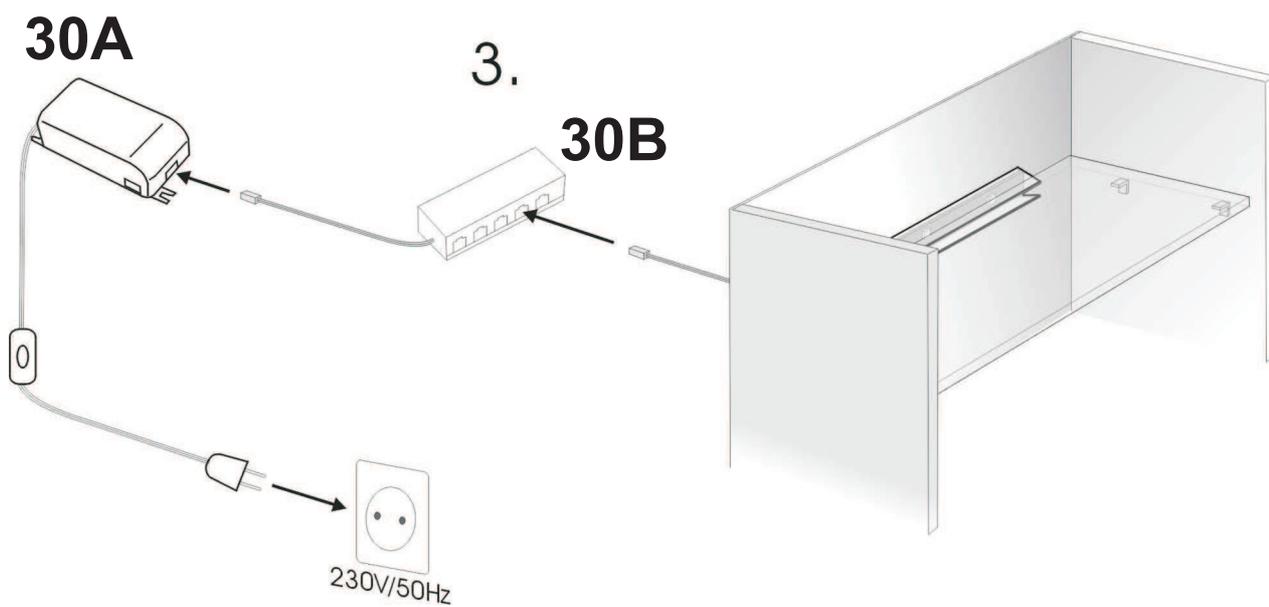

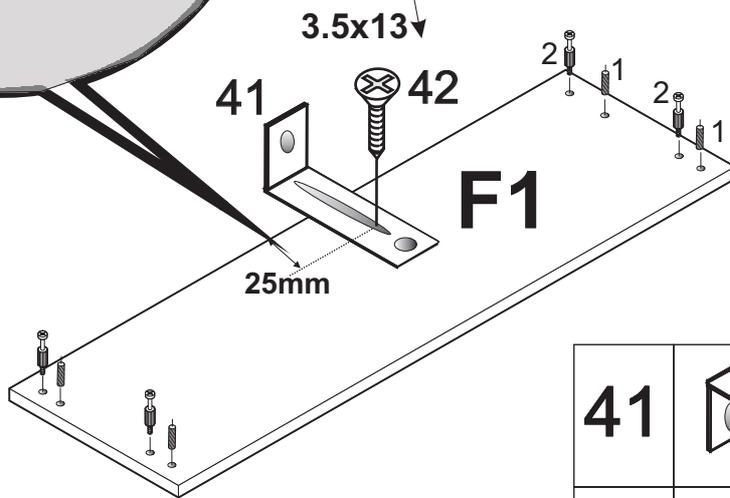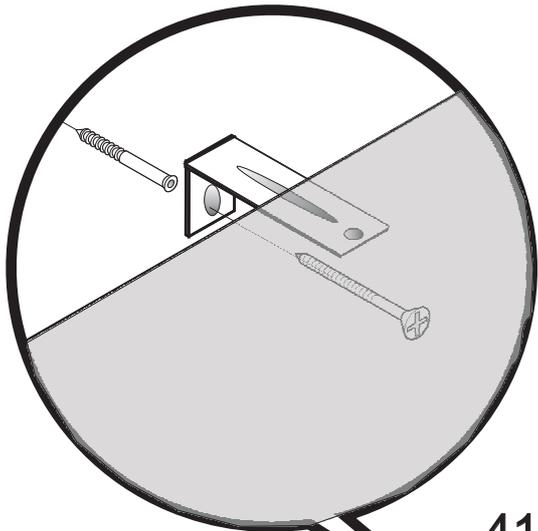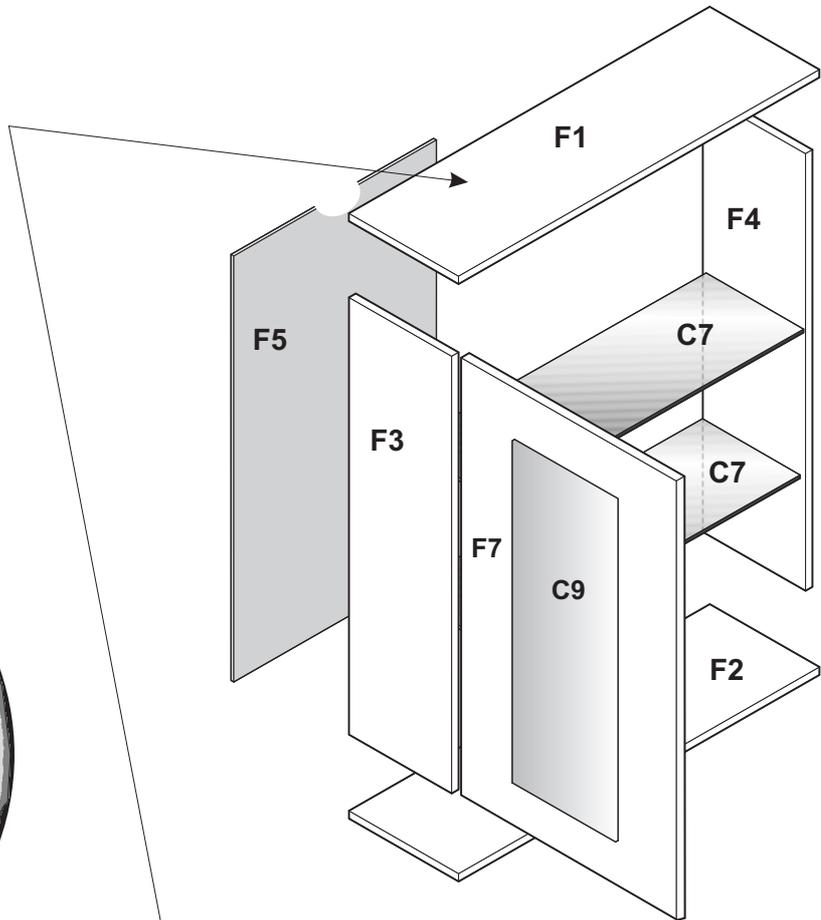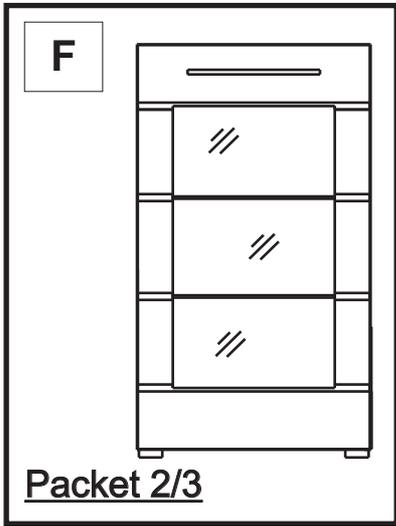

41		X 1
42	 3.5x13	X 1

