

Montageanleitung

Assembly instruction

Instructions de montage

Instrucciones de montaje

Instruzioni per il montaggio

Руководство по монтажу

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları

Navodilo za montažo

Montagehandleiding

A sen nus o hje

Upute o montaži

Instrucțiuni de montaj

Monteringsveiledning

إرشادات التركيب

Monteringsvejledning


Instruções de montagem

Monteringsanvisning

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Крепления / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Oblo-ge / armáture, balamale / Beslag / بعض الترکیبات / Beslag / Guarnições / Beslag



4 x VB1



12 x VB4



4 x VB14




2 x VB10



2 x TB24



6 x TB20



48 x SP1


3.5x15



2 x VB9



2 x TB25




16 x SO28




10 x SP3



10 x ZB 4



6 x SP7



8 x SR2




4 x VB19




18 x WI11



12 x SG5





6 x GR42




8 x VB3



1 x W2



3 x SKU1




12 x BT1



4 x WI5



2 x ZB1



12 x SO1



6 x SP11



1 x TB26



1 x TB27



8 x GL7

Sie benötigen:

You need:

Vous avez besoin de:

Necesita:

Le servono :

Бам потребуются:

Potrebujete:

Tarvitset:

Avejí nevoie de :

Du behøver:

سوف تحتاج إلى:



Potrzebne są:

Potřebujete:

Potrebujete:

Szükséges eszközök:

Ha Bac ca Ви нужни:

Ihtiyacınız:

U hebt nodig:

Trebate:

Du skal bruge:

Necessita de:



Du behöver:

سوف تحتاج إلى:




VIBORG 2

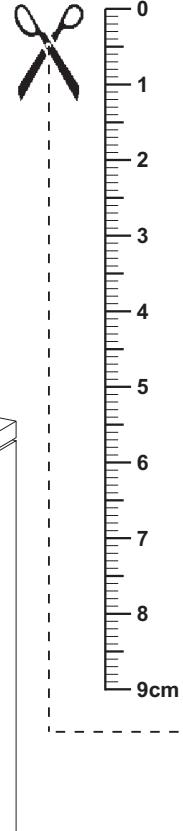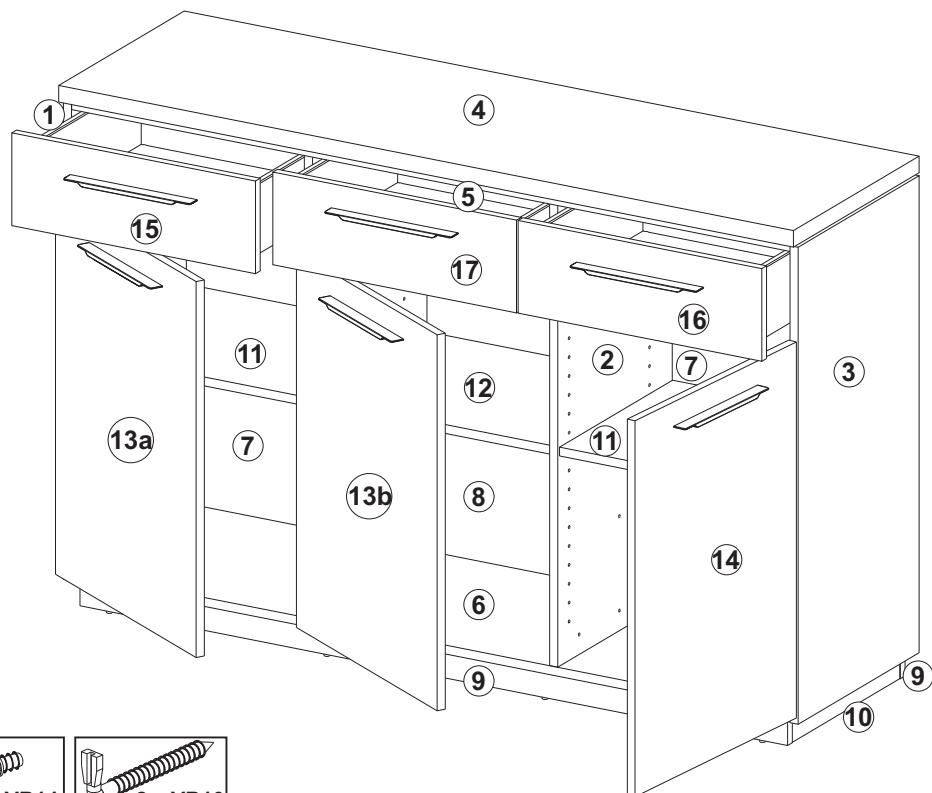Art.-Nr. 4003-002



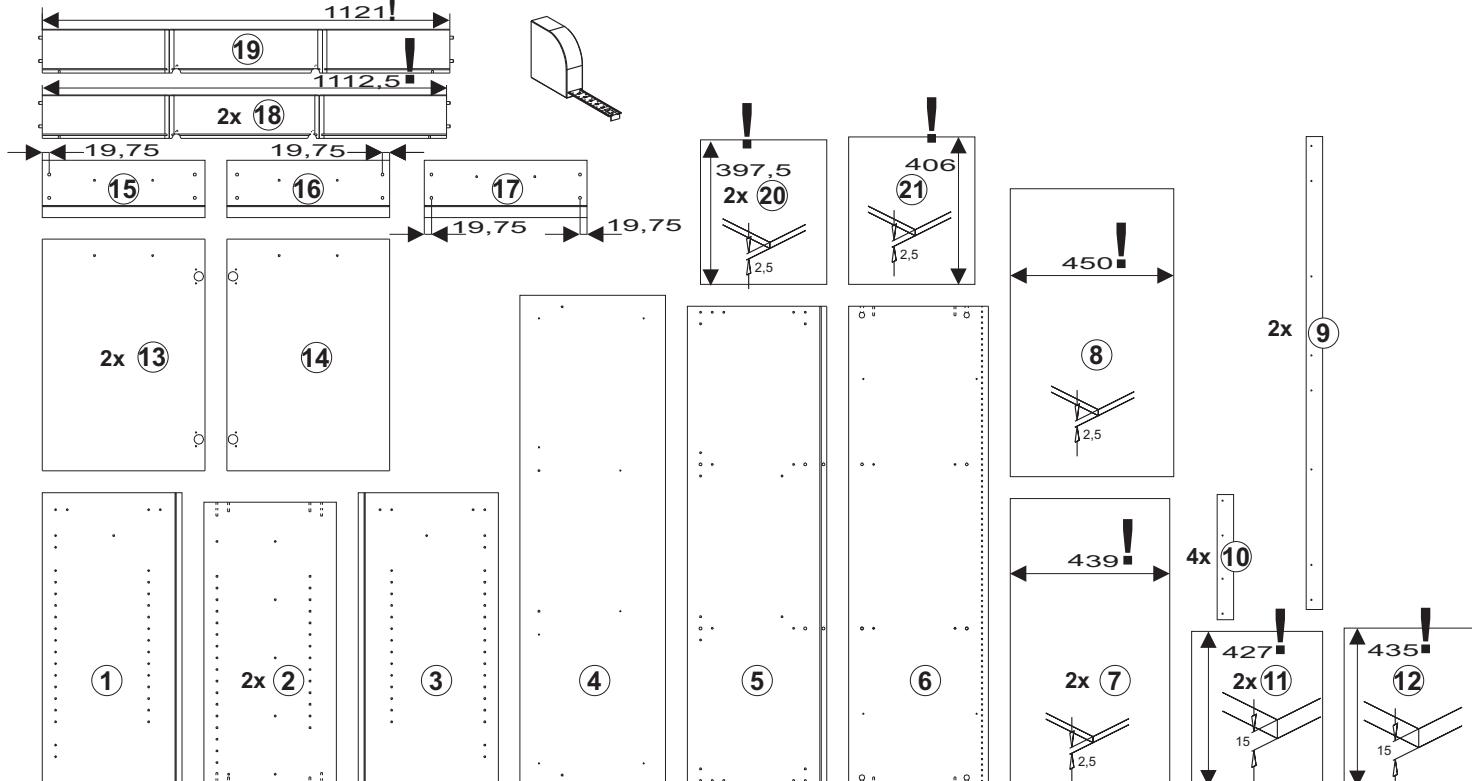Teile / article / Pièces / Piezas / Pezzi / часті / Części / Díly / Diely / Alkatrészek / Детали / parçalar / dele / Onderdelen / osat / Dijelovi
piese / Deler / والتجهيزات / Dele / Peças / Delar



A

3,5x15
18 x SP1 18 x
WI 11


1 4x

1x


2 2x



2x

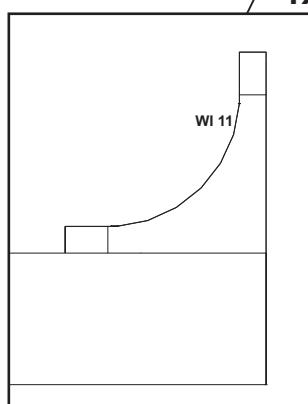WI 11




3x

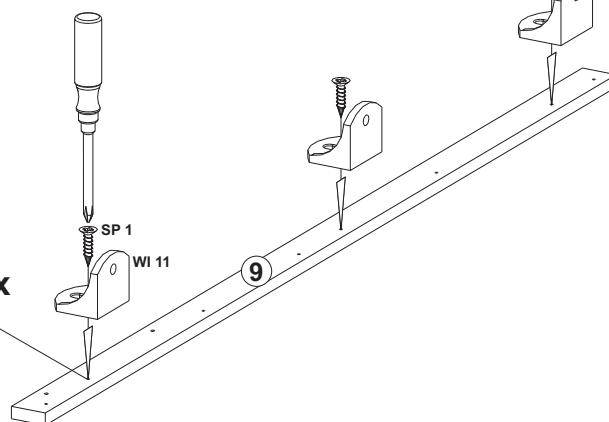

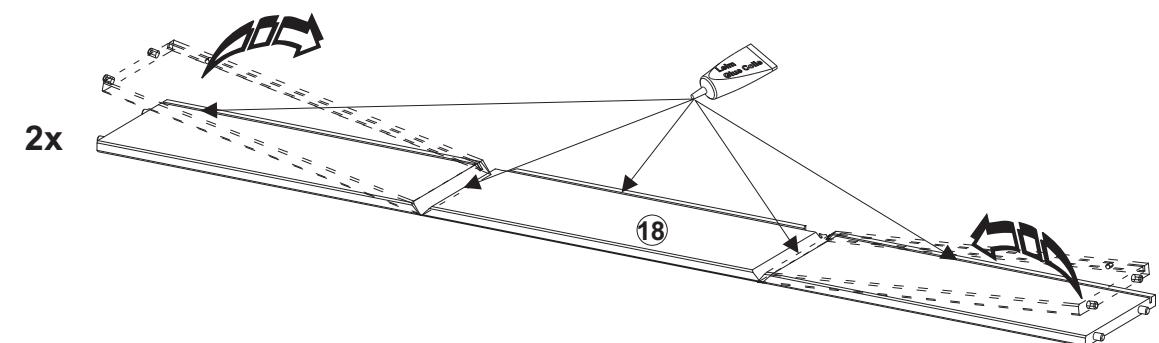B**1****2****3**

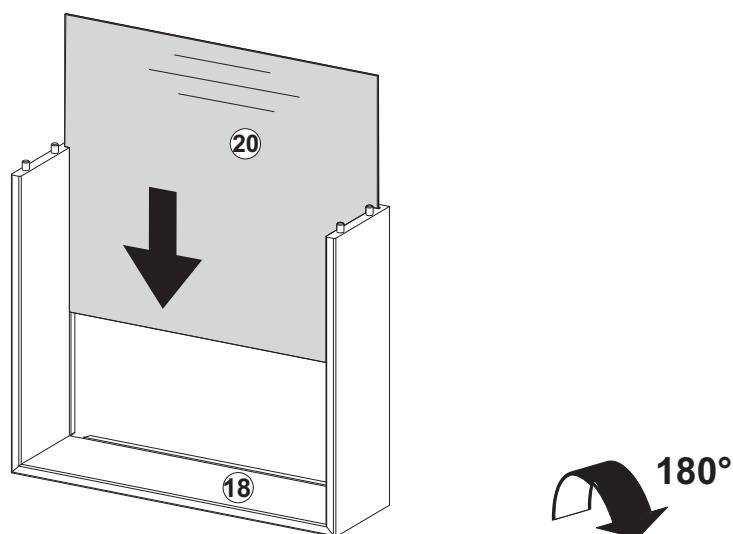2x







C

M4x20



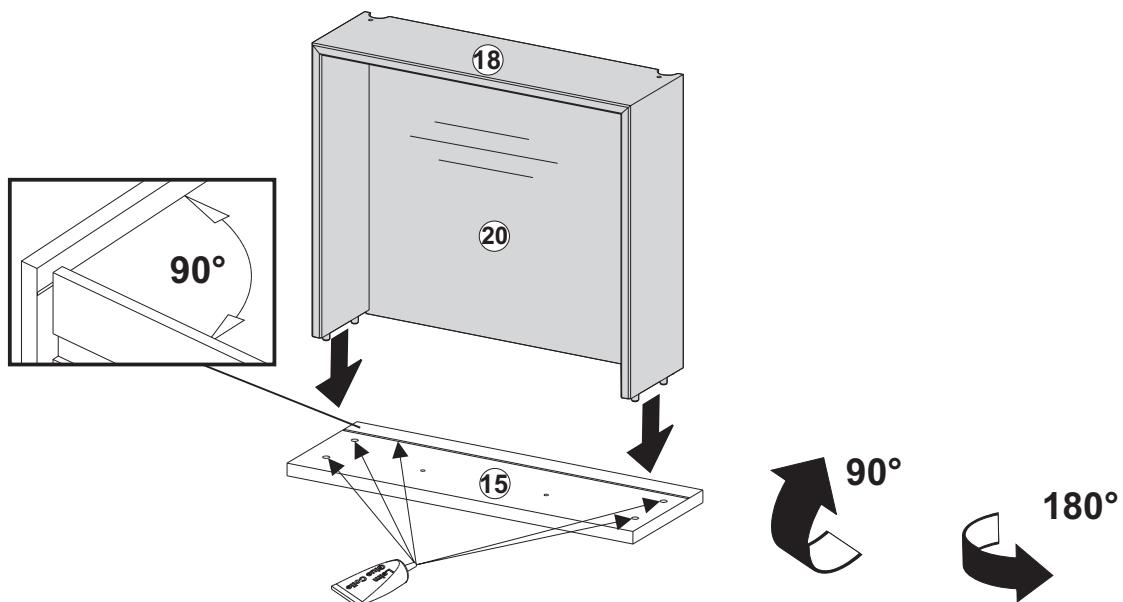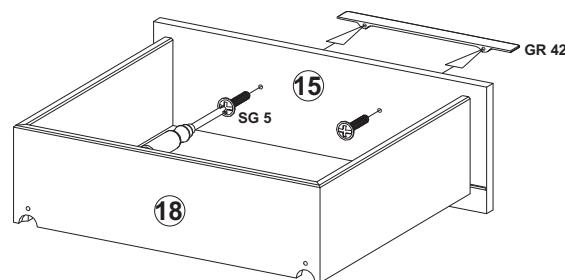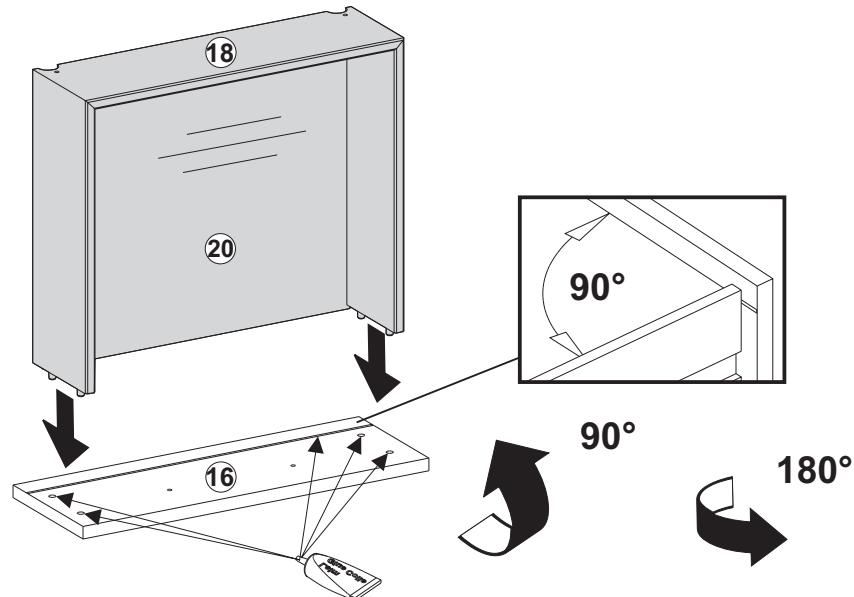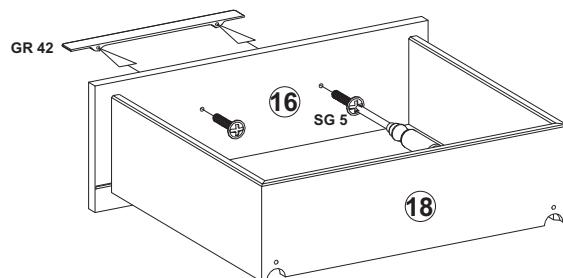ZB1


1**2****3****4**

D

M4x20







2 x SG5









1 x GR42





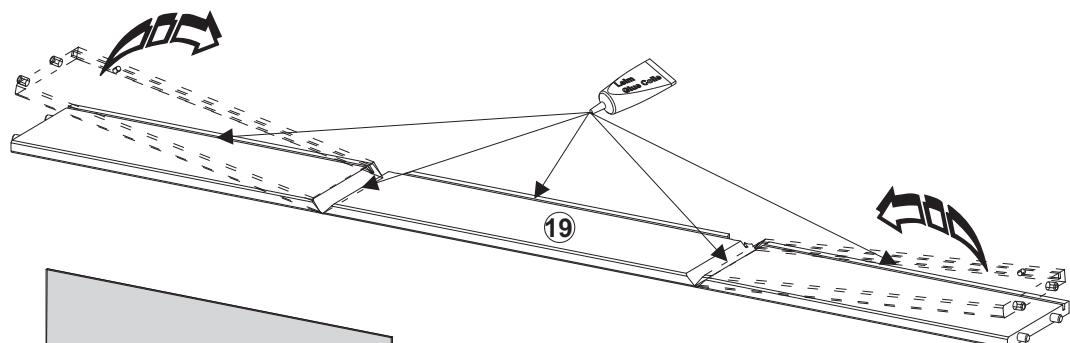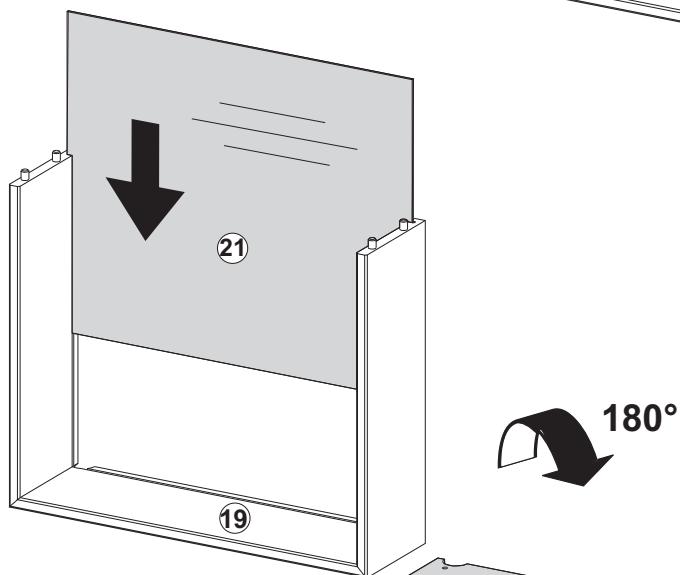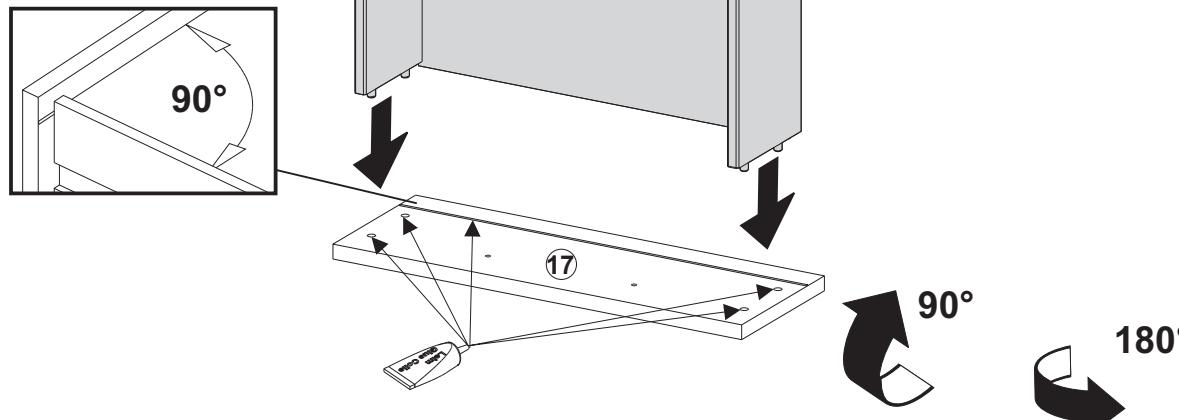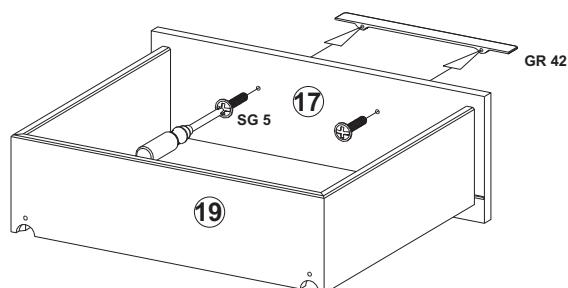ZB1

1**2****3****4**

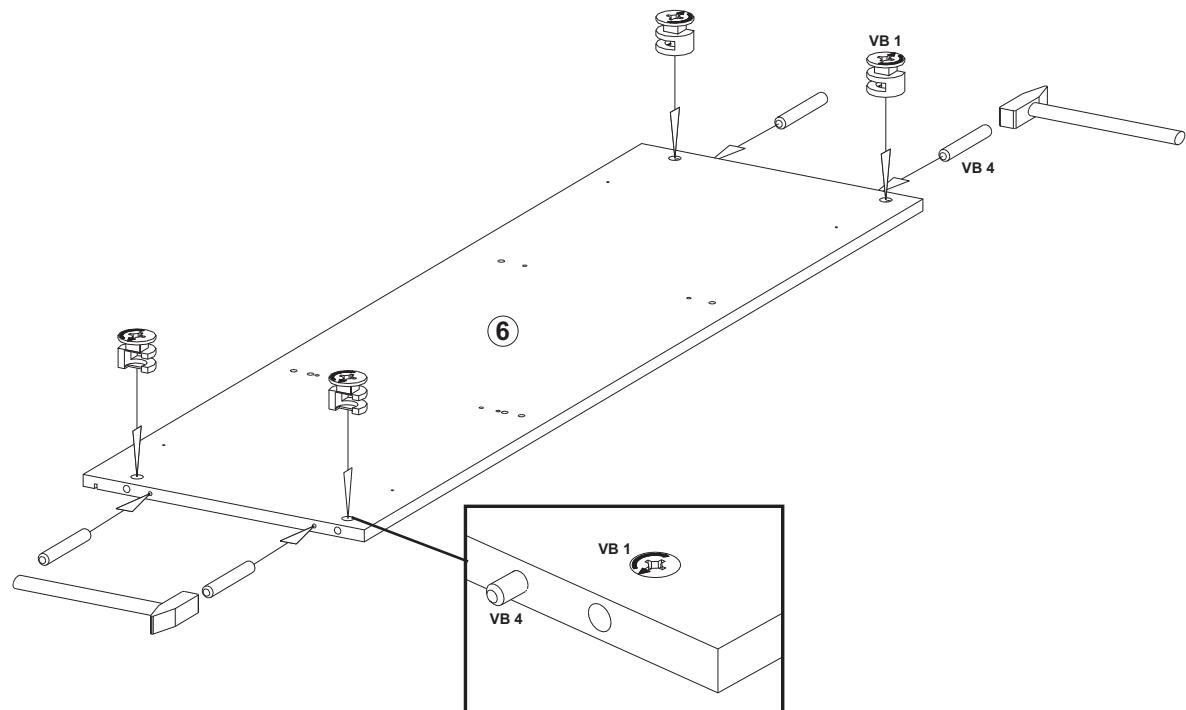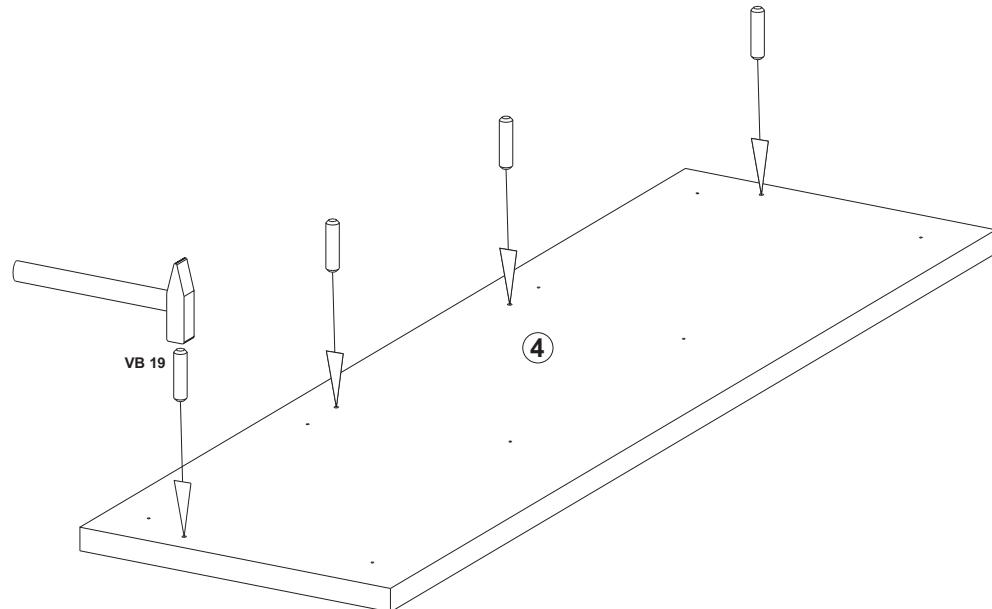E

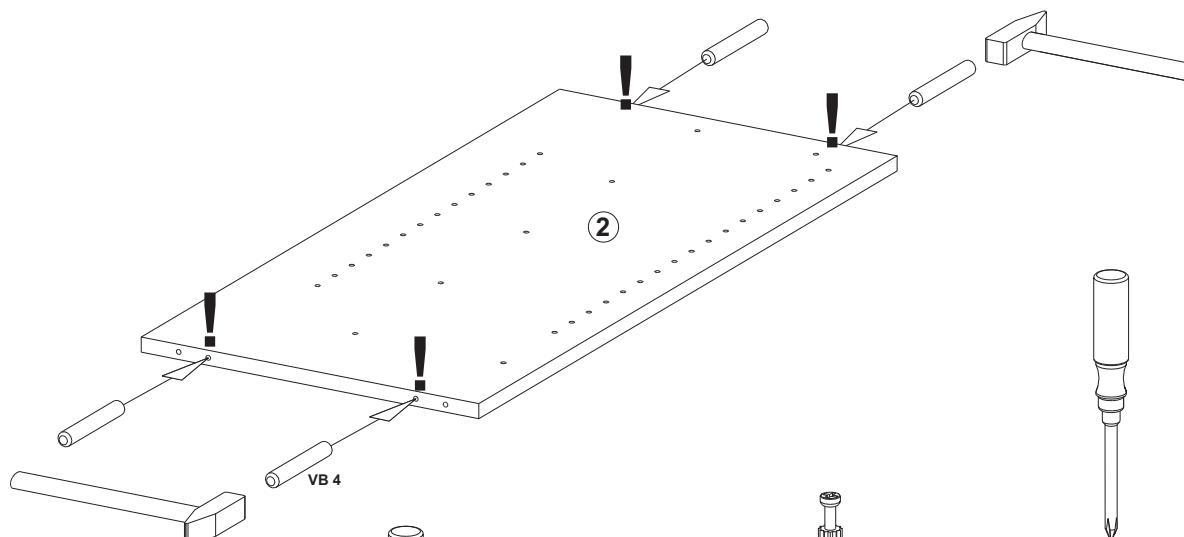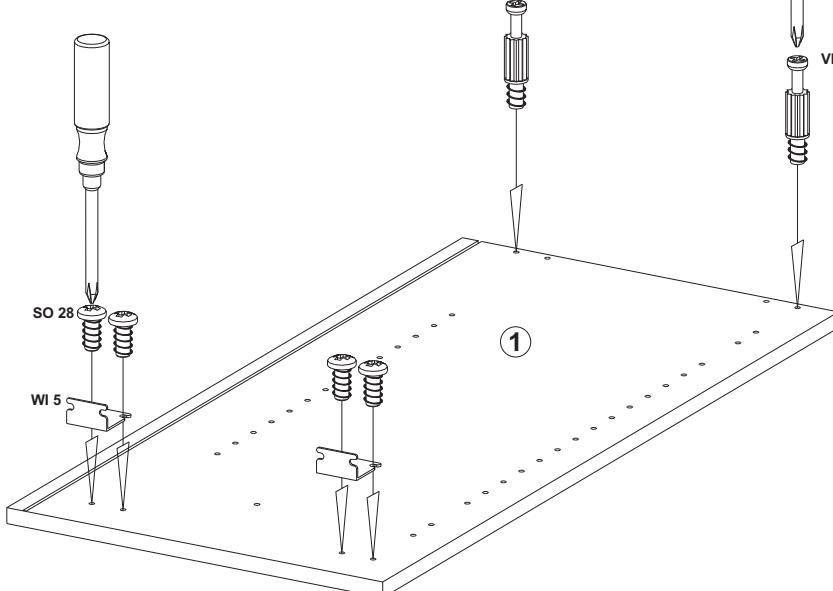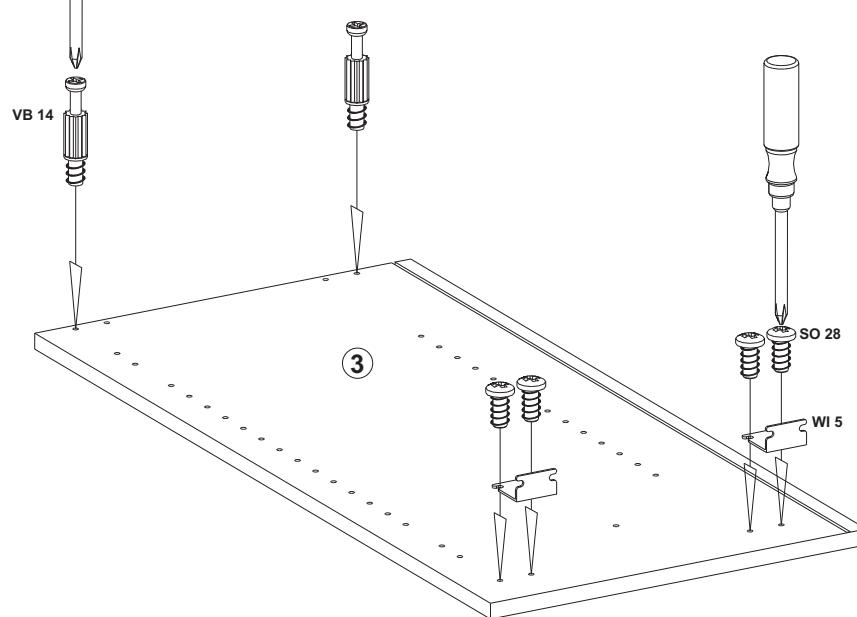F**1** 2x**2****1****2****3**

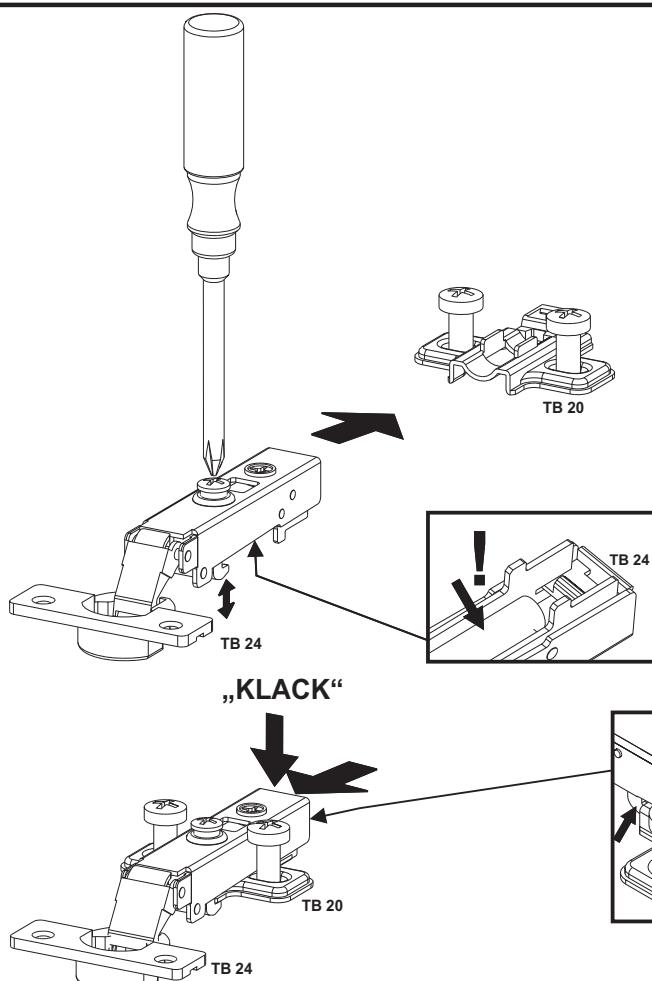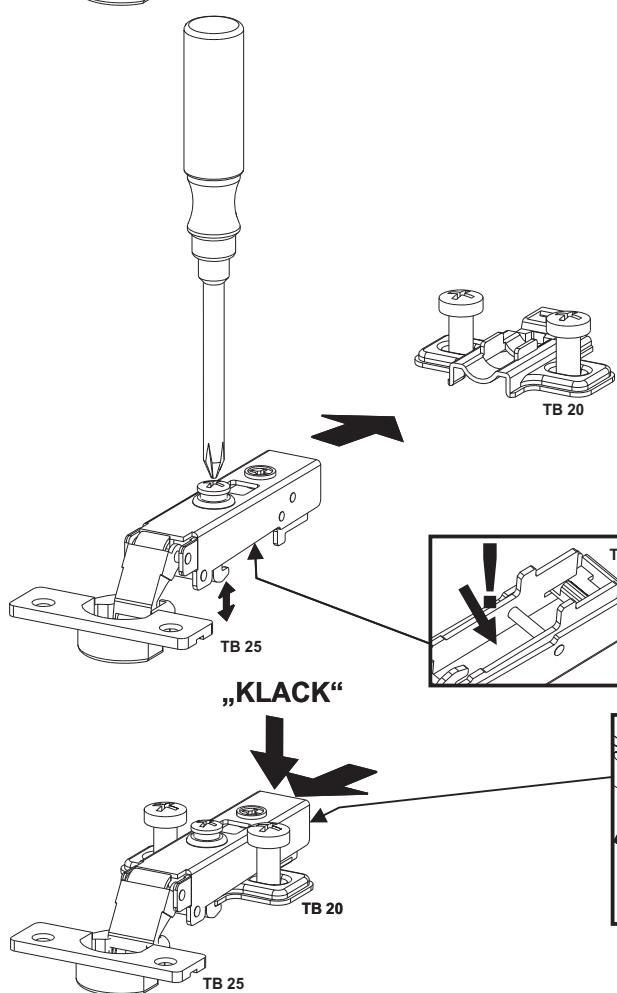G**1 2x****2 2x****3 2x****4 2x**

H

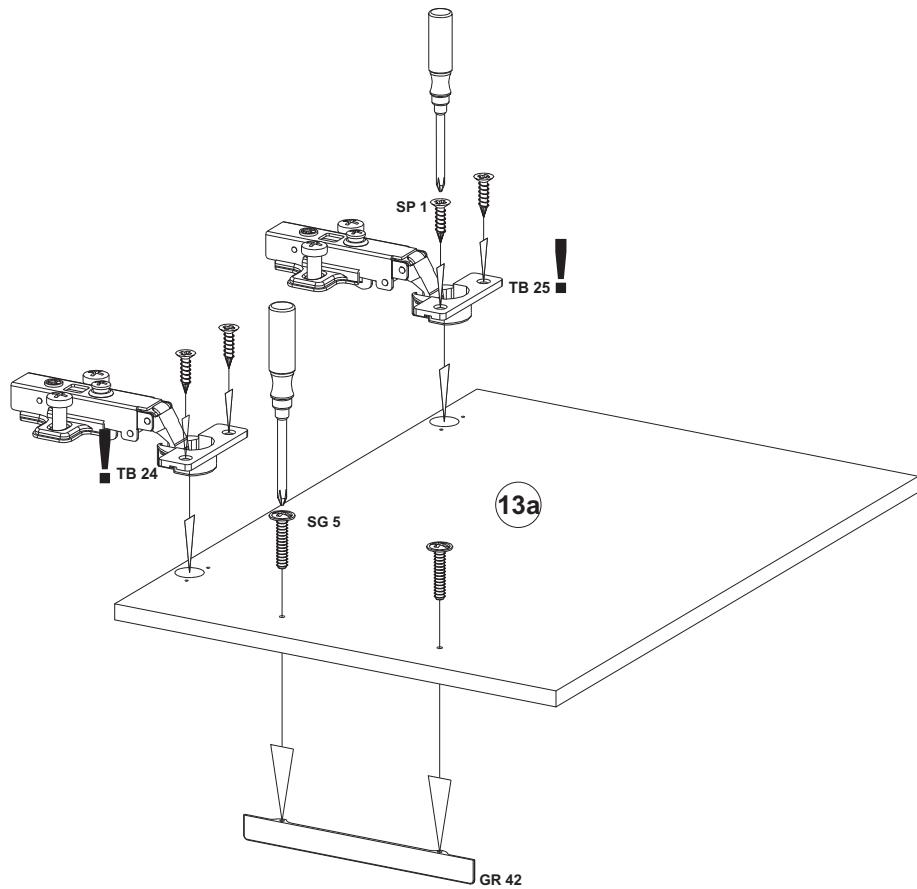
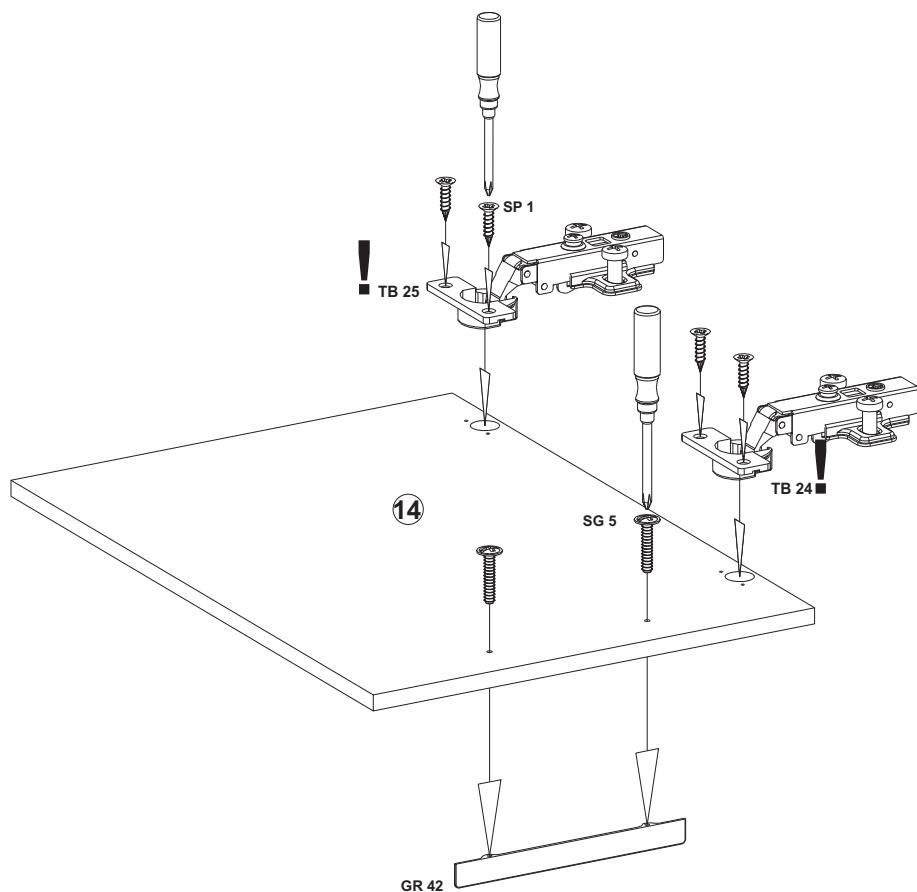
M4x20

4 x SG5




3,5x15


8 x SP1

**1****2**


I




1

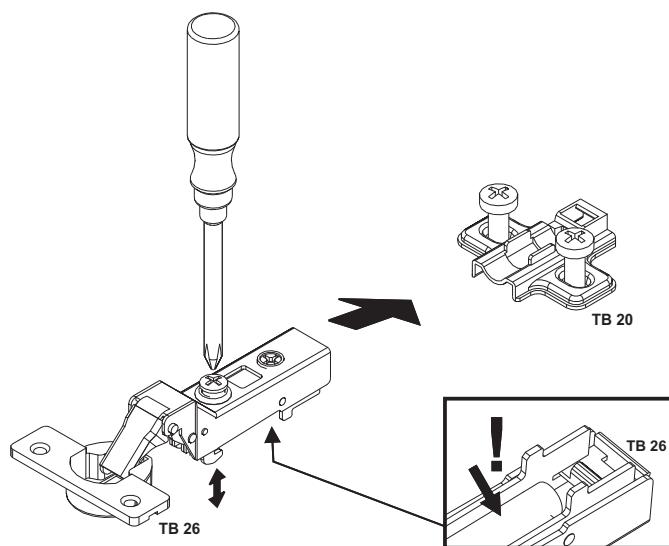


„KLACK“

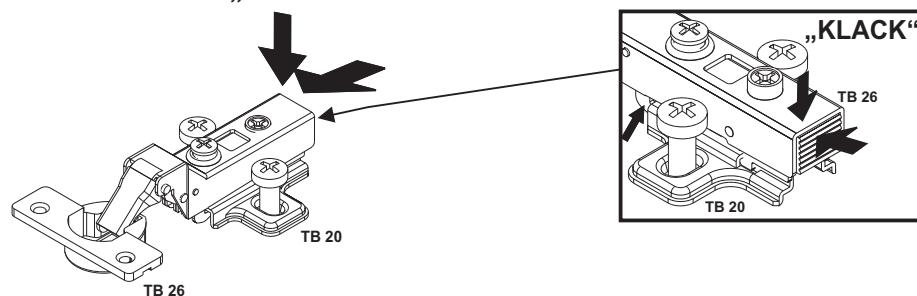

2

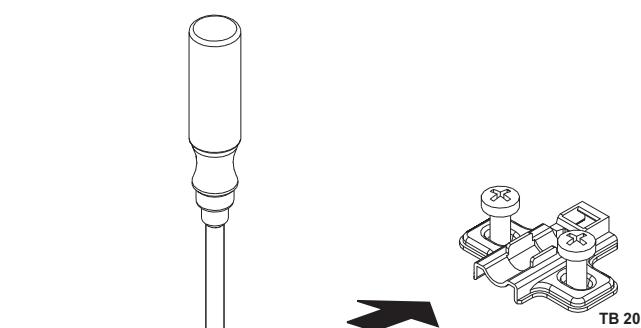

„KLACK“

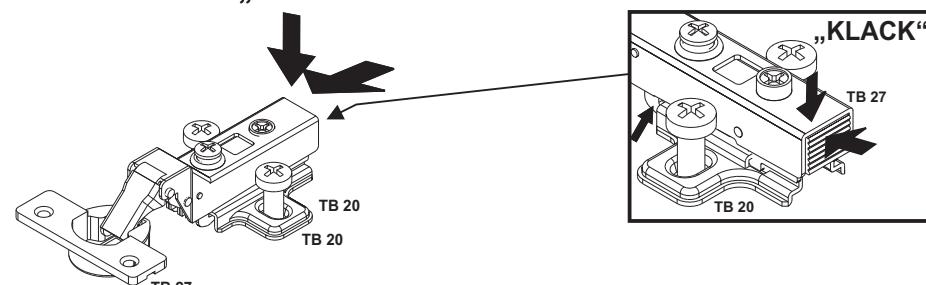


4






J

2 x SG5



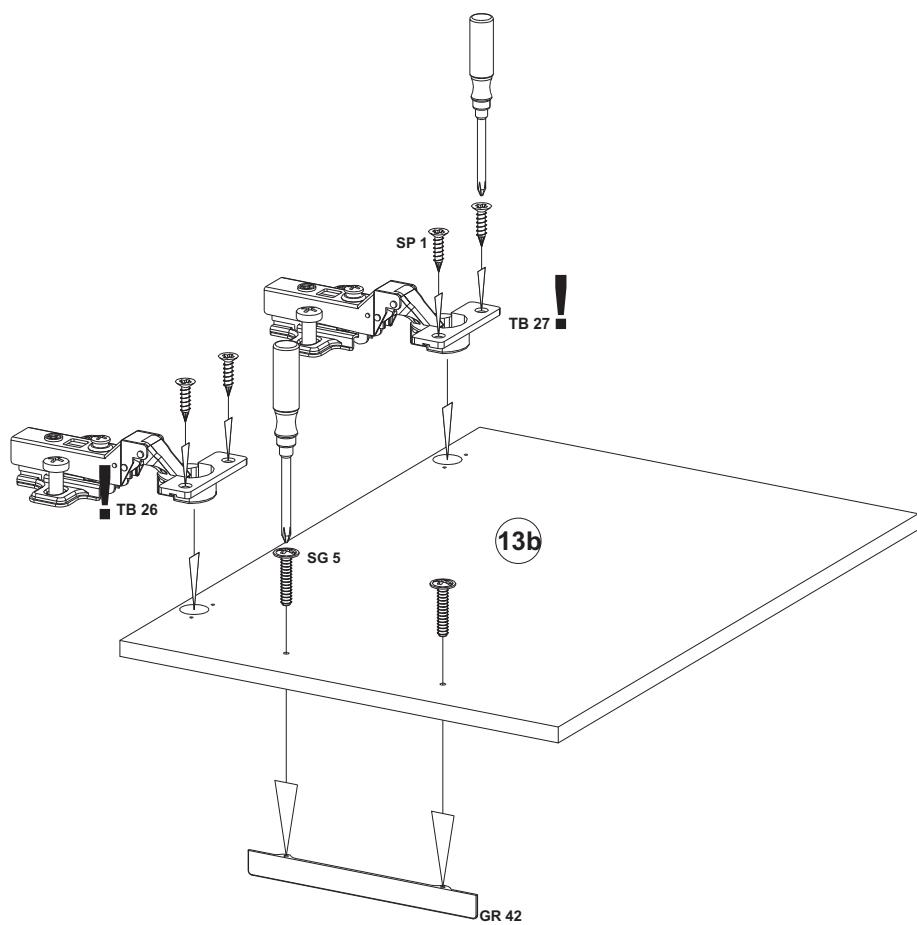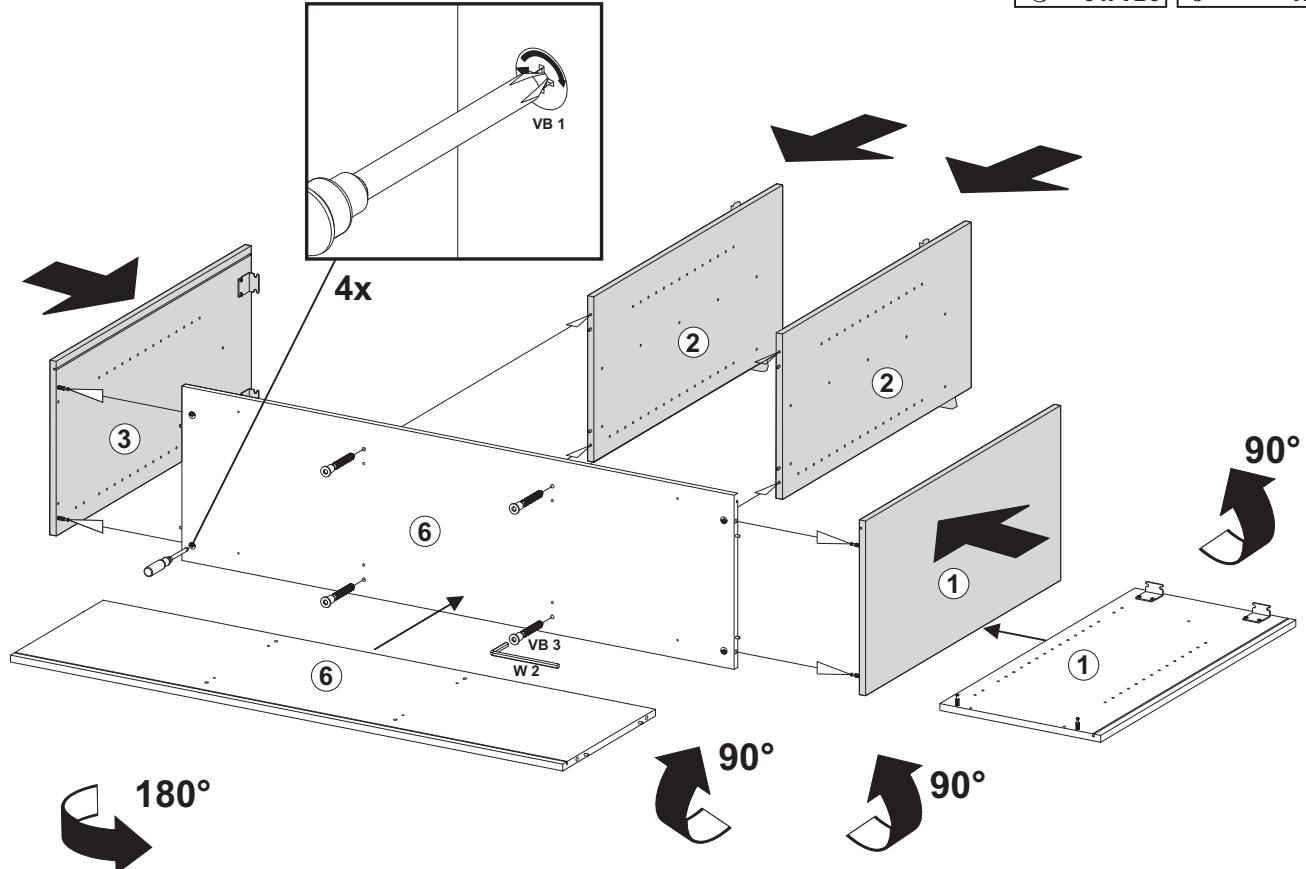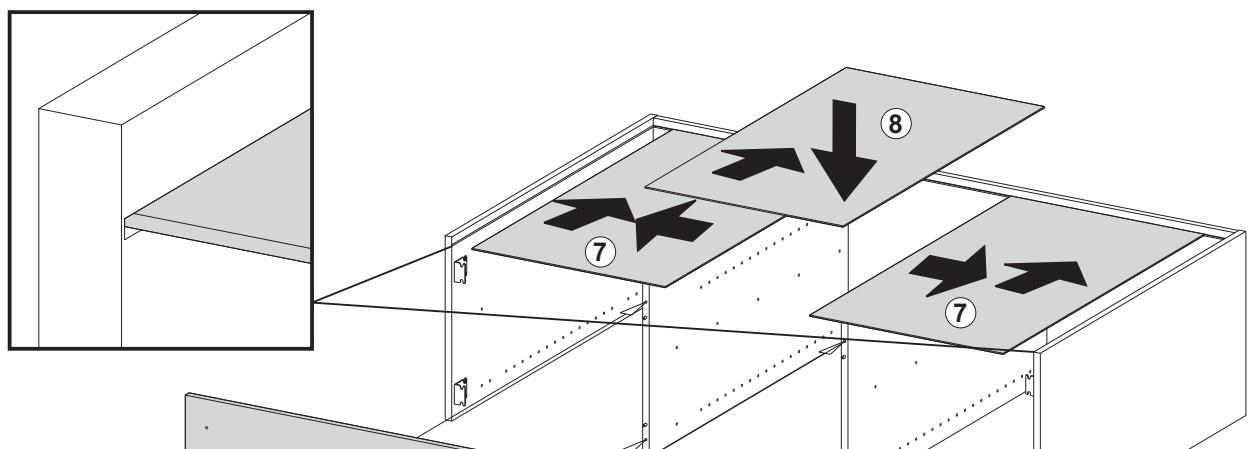
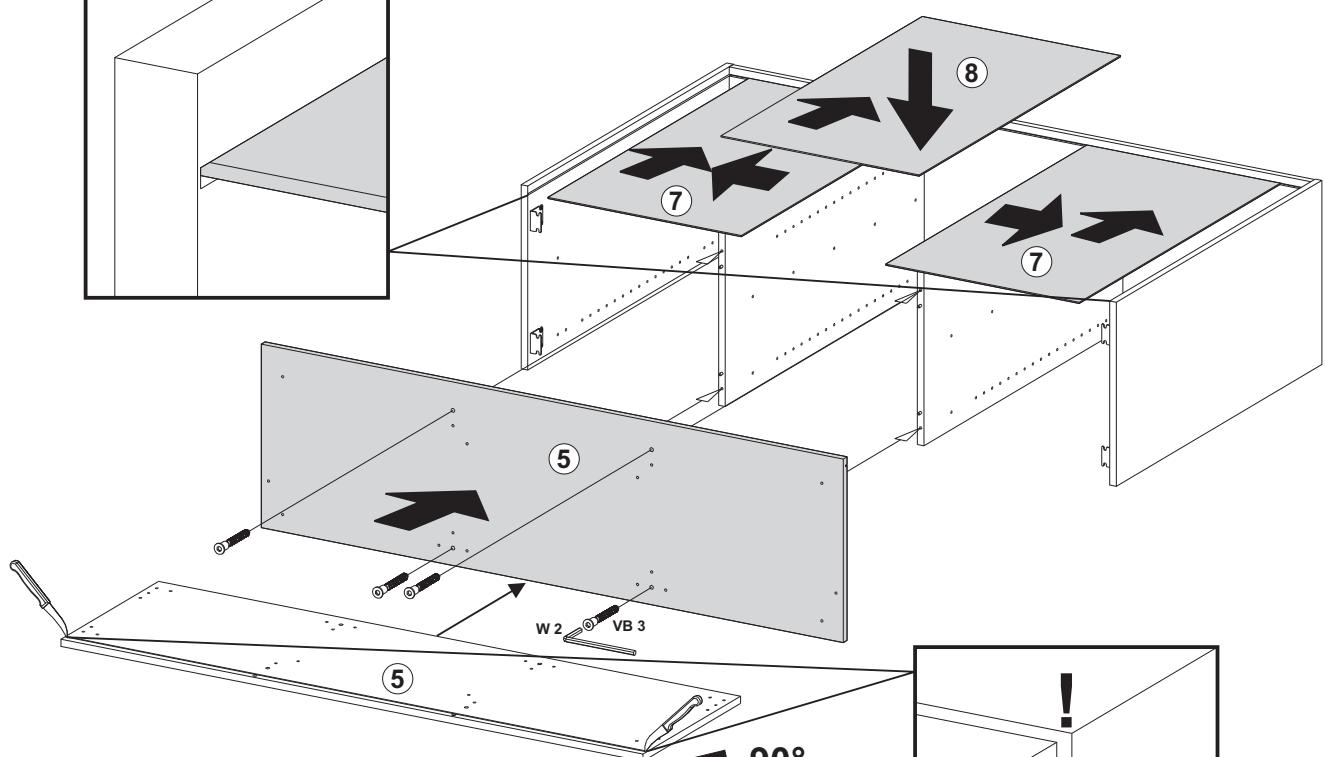
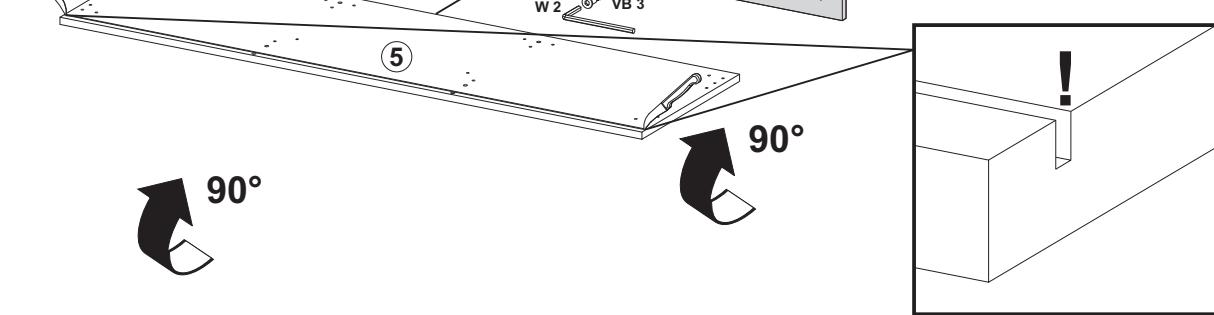
4 x SP1




K**1****2****3****4**

L

2,7x20 8 x SR2	3,5x20 10 x SP3	10 x ZB 4	6,3x13 8 x SO28
-------------------	--------------------	--------------	--------------------

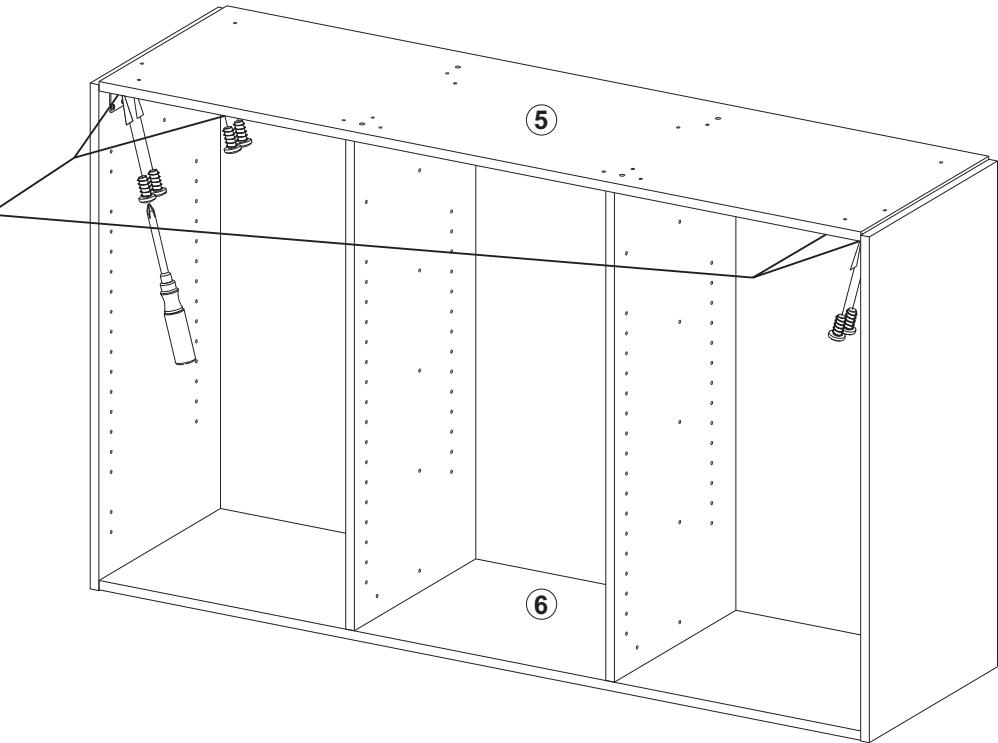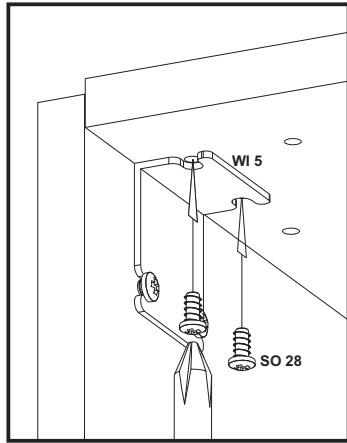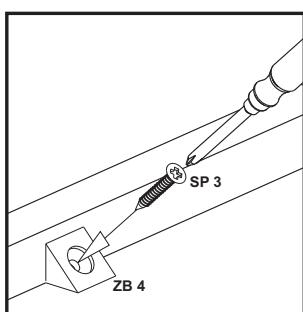**1**

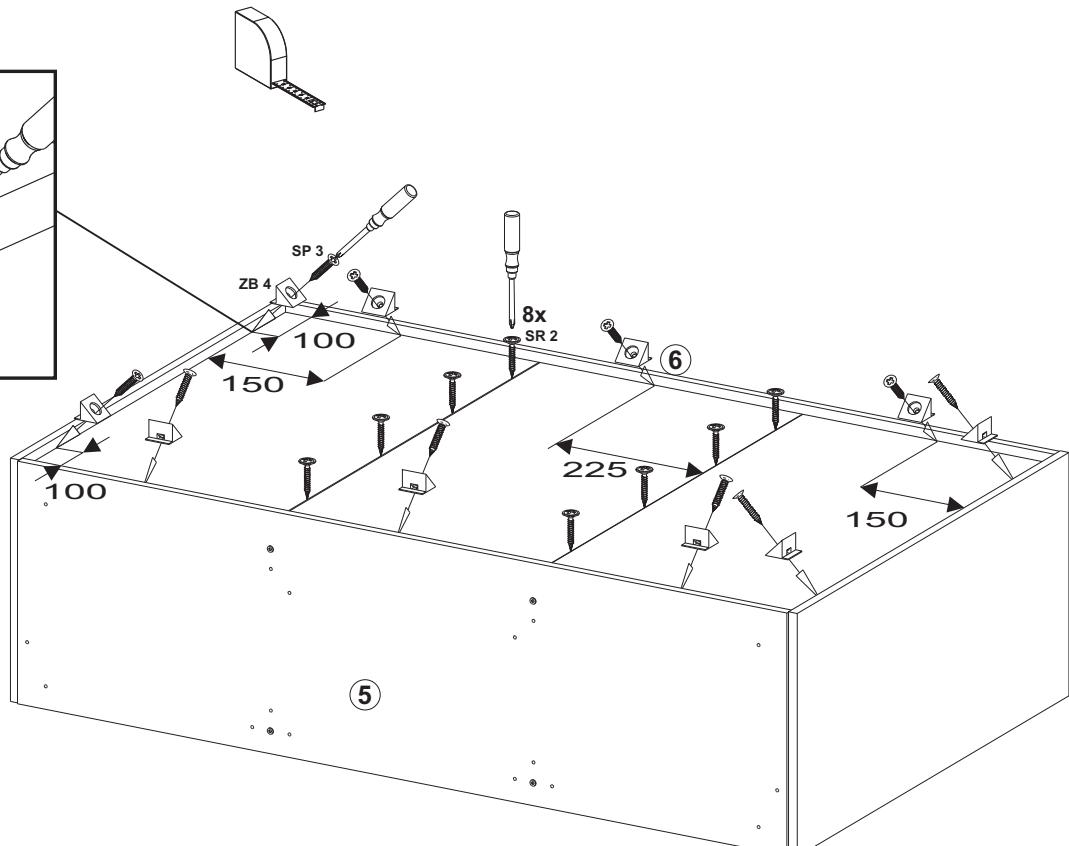90°




**2**

90°







180°

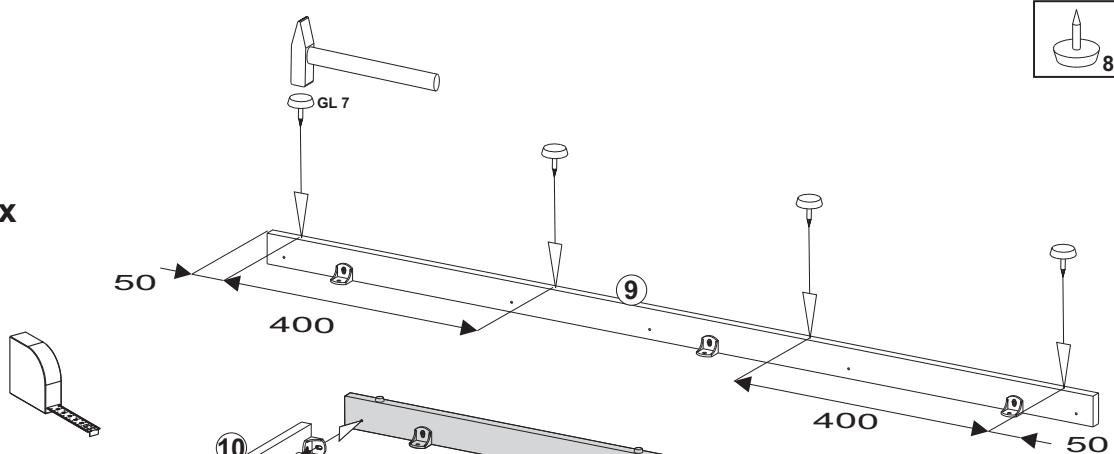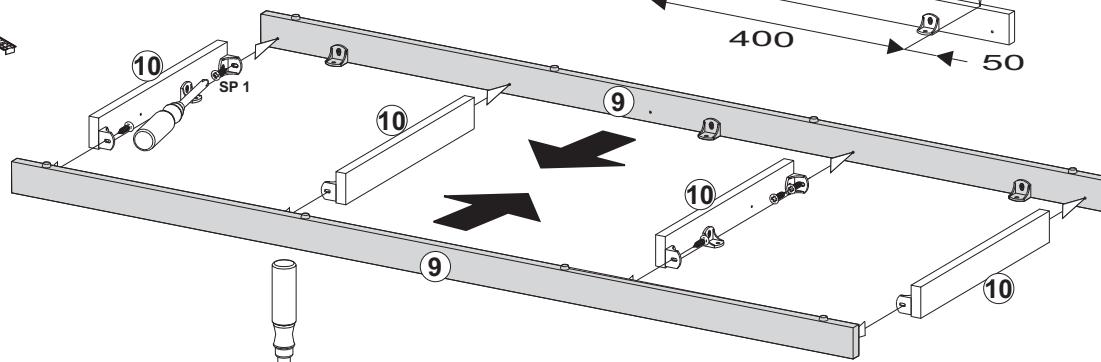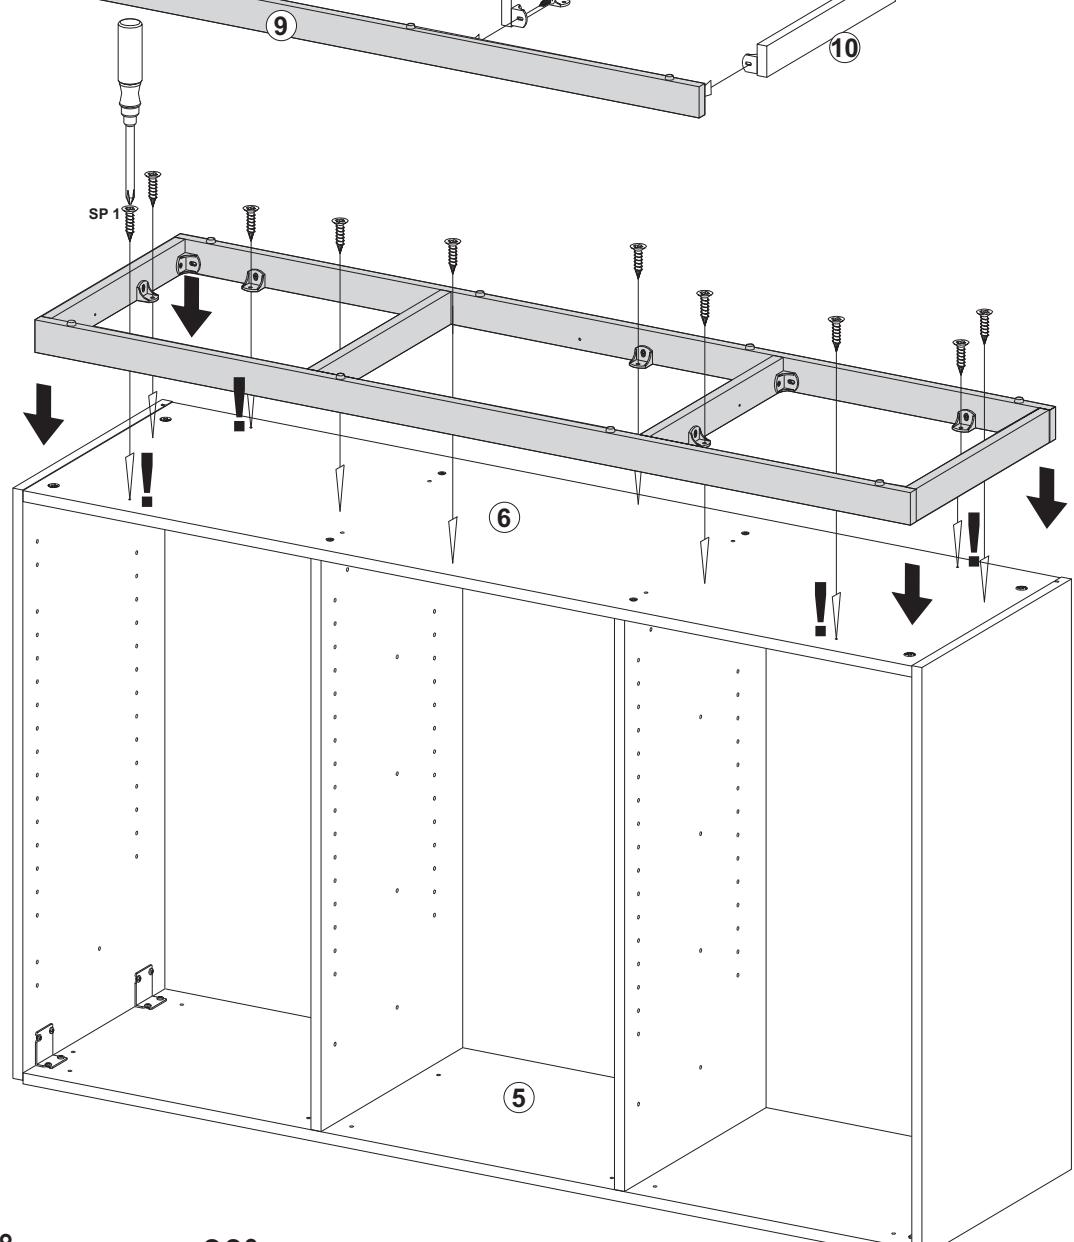3


M 8 x GL7
3,5x15
 18 x SP1
18 x SP1**1** 2x**2****3****4**




N


	3 x SKU1		6,2x8 12 x SO1		3,0x12 6 x SP7		4,0x36 6 x SP11
--	----------	---	-------------------	---	-------------------	---	--------------------

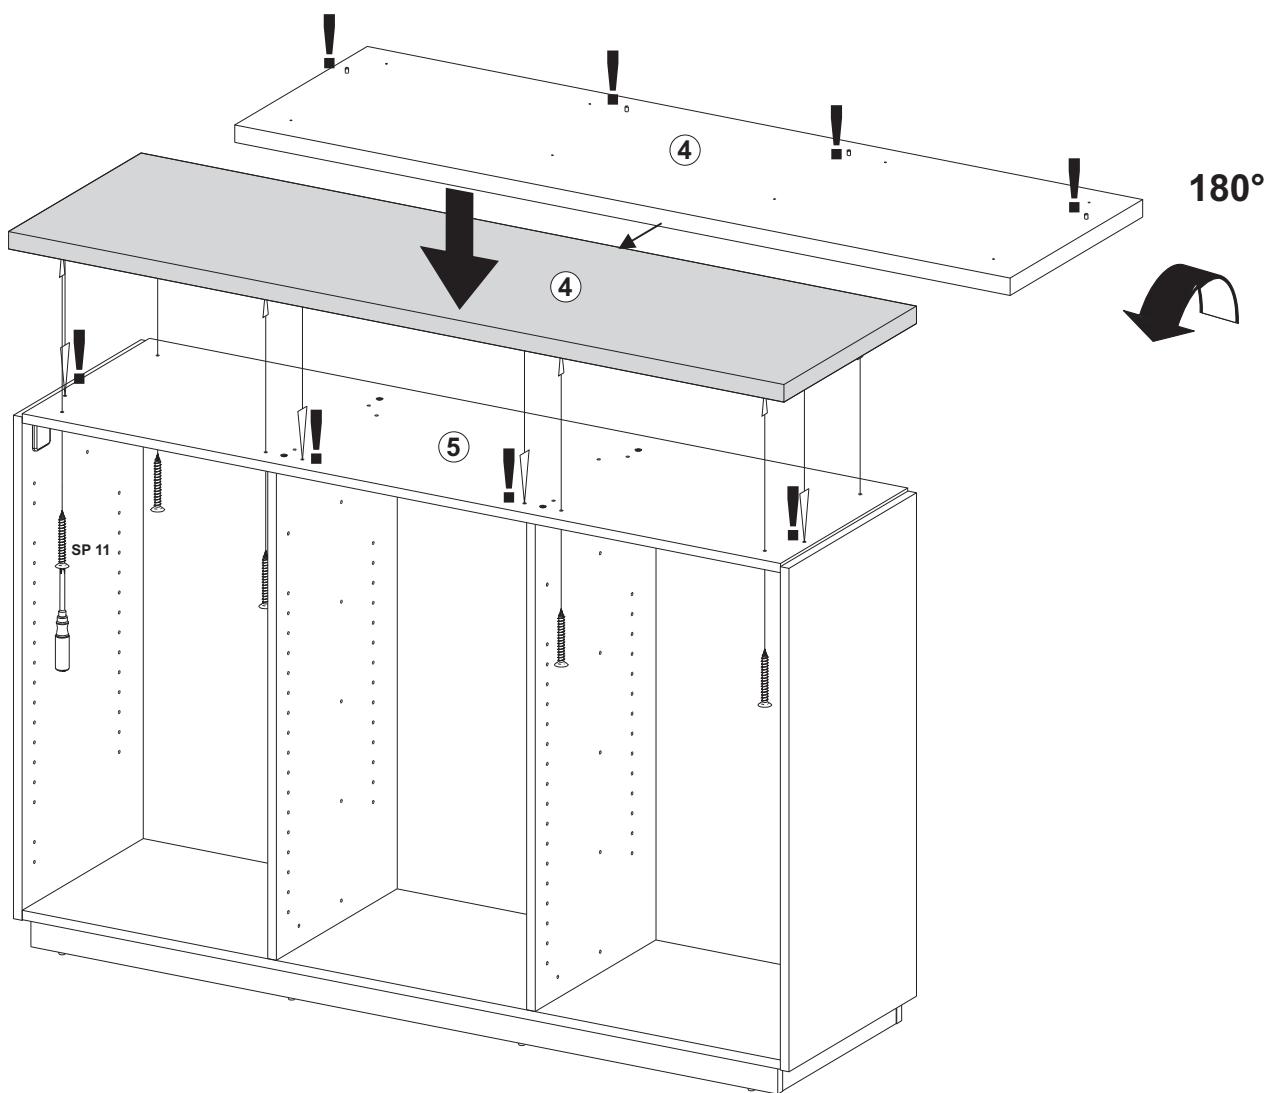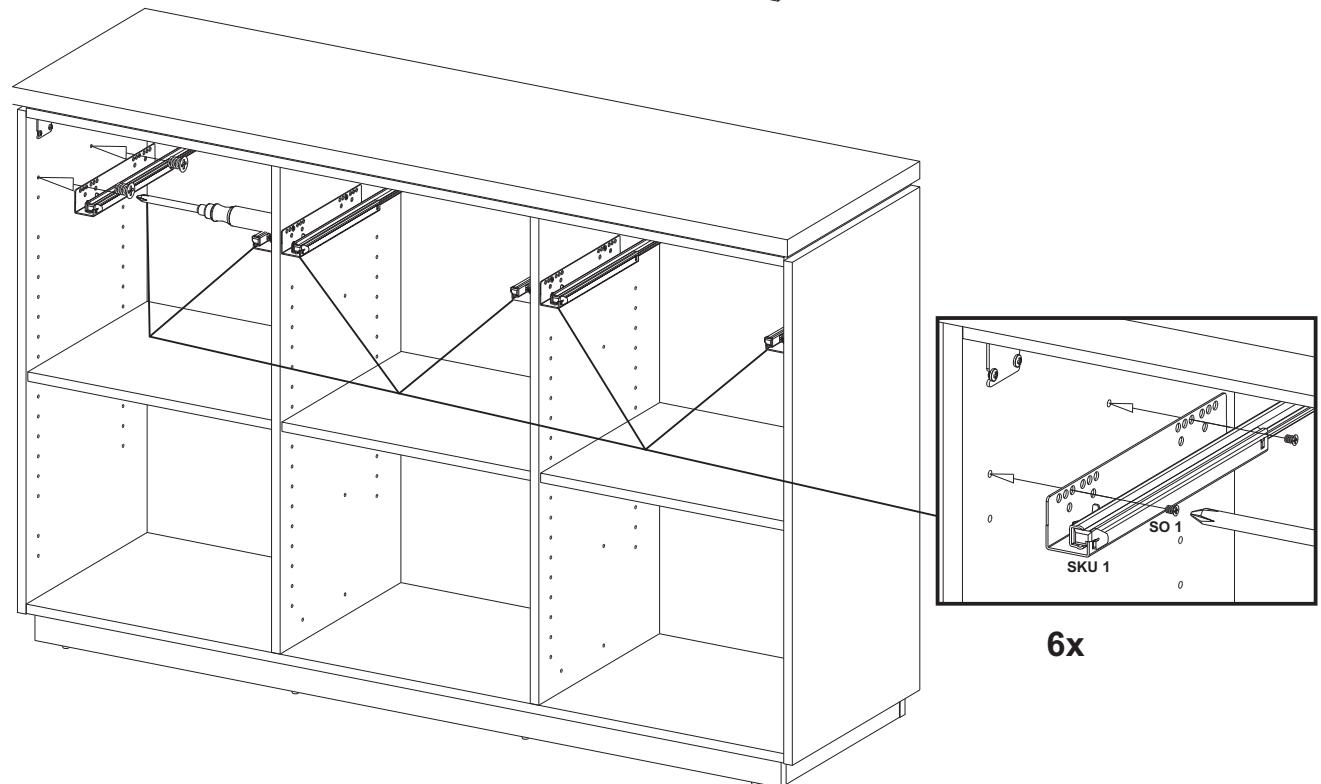1**2**

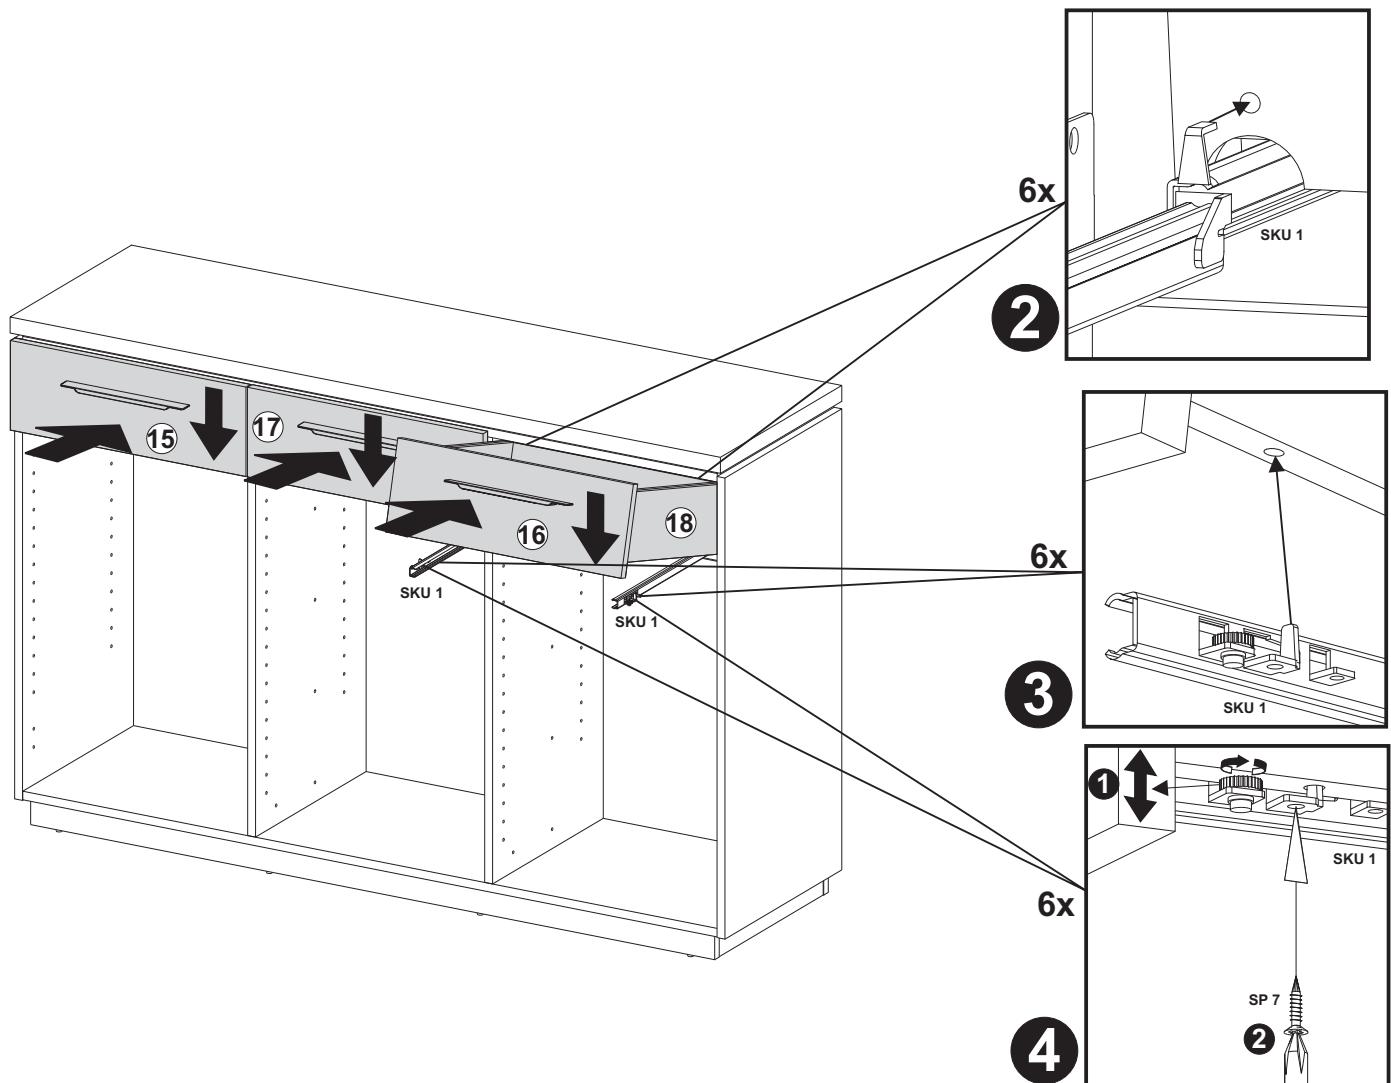O

3,0x12
6 x SP7

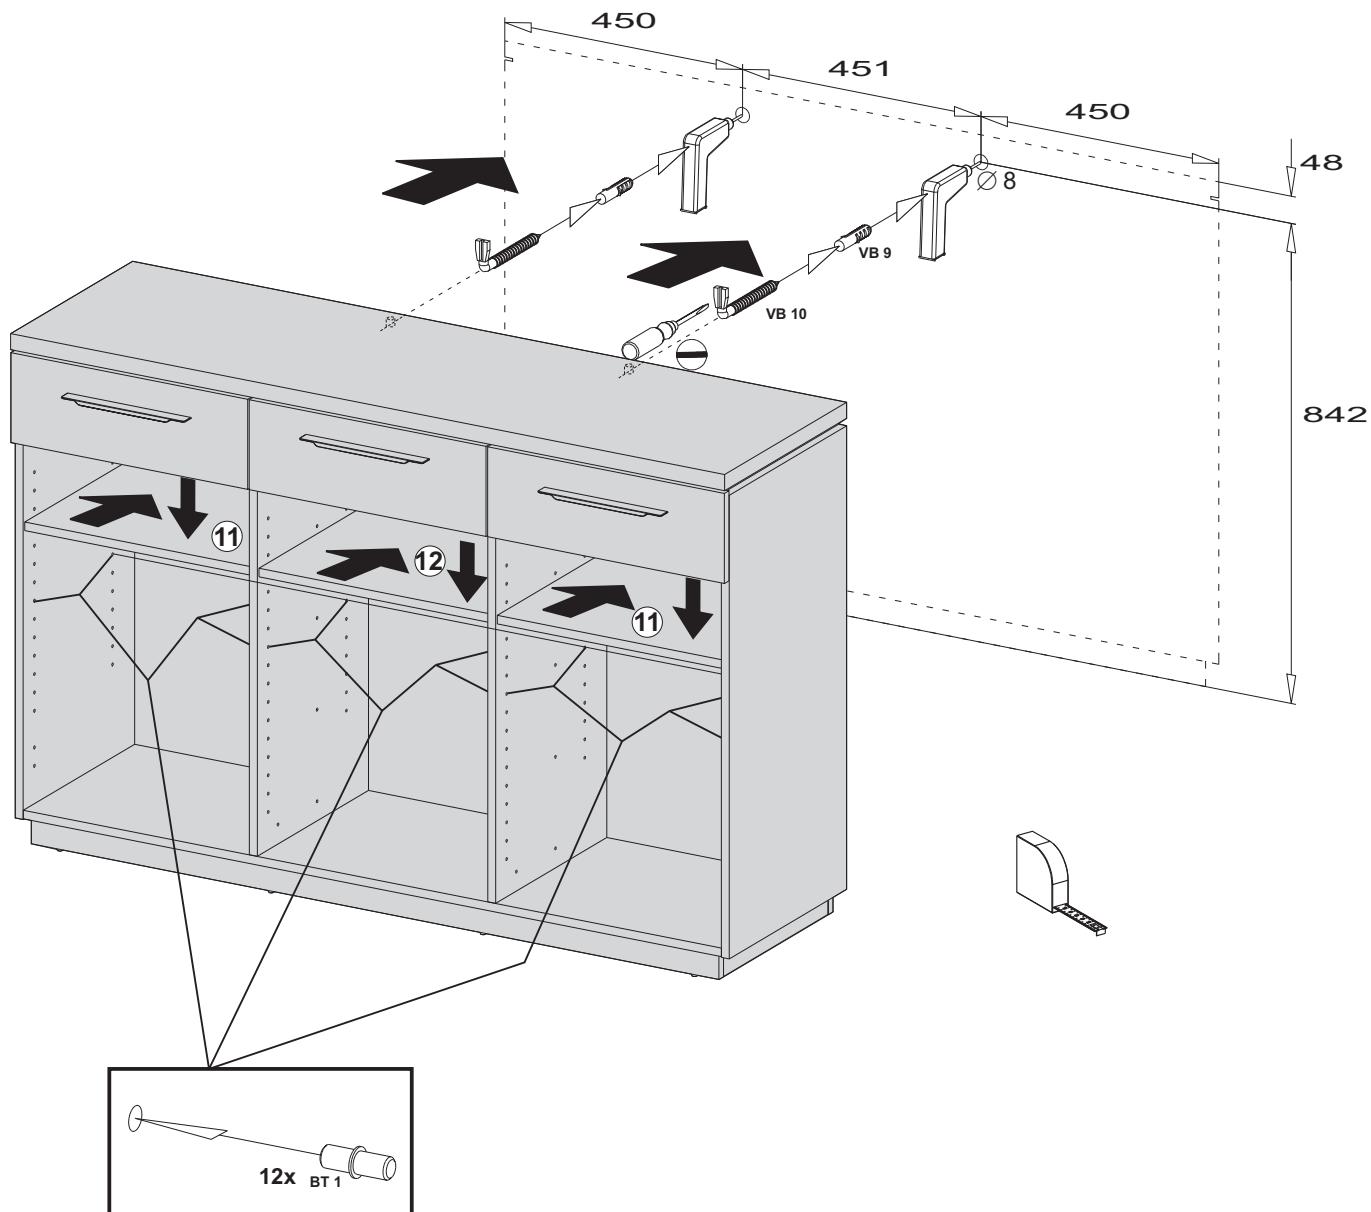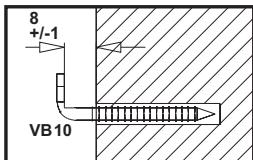P

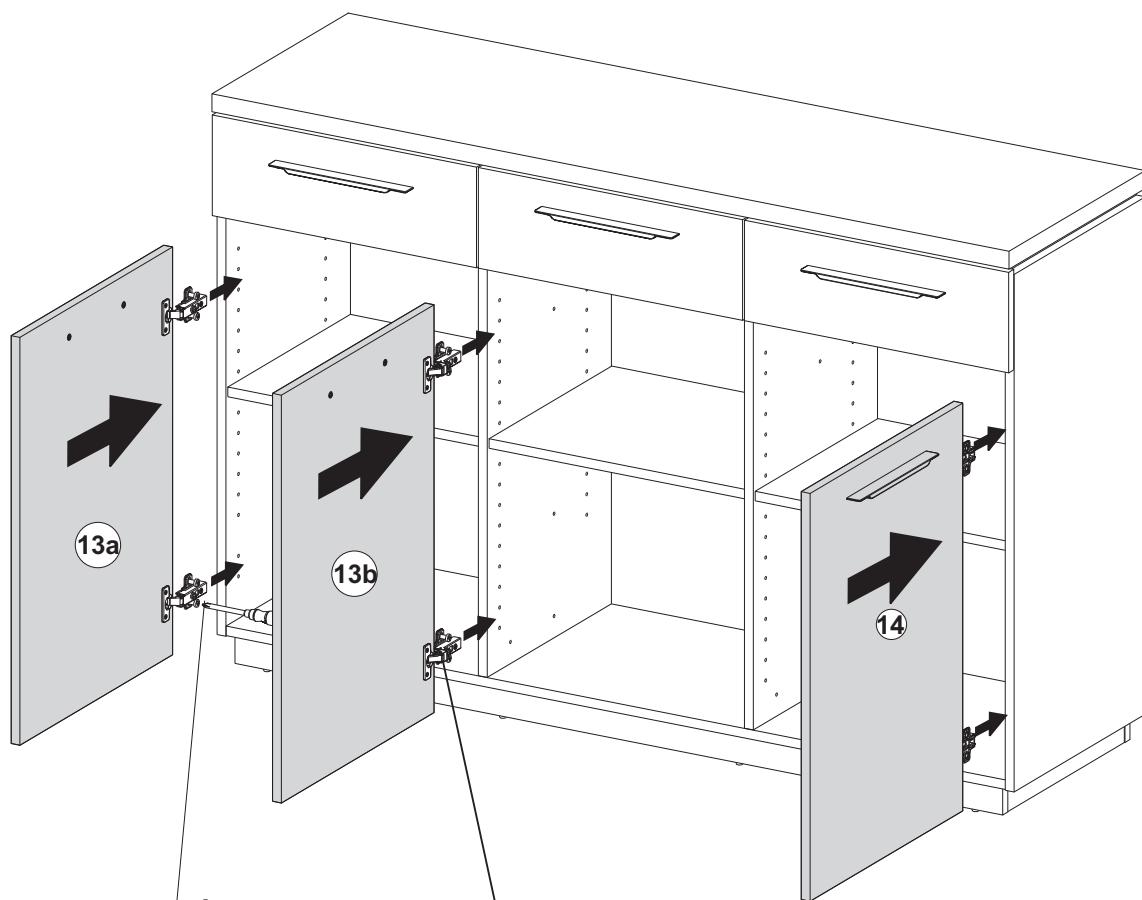R

4x

2x

